Sprint PCS®

The clear alternative to cellular.SM

© 2000 Sprint Spectrum L.P. All rights reserved. No reproduction in whole or in part without prior written approval. Sprint, Sprint PCS, Sprint PCS Phone, Sprint PCS Wireless Web and the diamond logo are trademarks of Sprint Communications Company L.P. All other trademarks are property of their respective owners.

Printed in the U.S.A.

Table of Contents

Welcome to Sprint PCS 1

1. Getting Started with Sprint PCS Service 3

- Getting Started with Sprint PCS Service 4
- What you Should have Handy When you Call: 5
- Setting Up your Voicemail 5
- Understanding this User Guide 8

2. Getting to Know your Sprint PCS Phone™ 9

- Highlights 10
- Front View of Phone 12
- Viewing the Display Screen 15
- Turning your Phone ON and OFF 16
- Using the KeyGuard 17
- Using the Battery 17

3. Understanding Roaming 23

- Understanding How Roaming Works 24
- Setting your Phone's Roam Mode 26
- Setting an Alert When Roaming Charges Apply (Call Guard) 27
- Setting the Time and Date in Analog Mode 28

4. Making and Answering Calls 29

- Making Calls 30
- Answering Calls 30
- Missed Call Notification 30
- Dialing Options 31
- In-Call Options 32
- Incoming Call Notification 33
- End-of-Call Options 34
- Saving a Phone Number 35
- Finding a Phone Number 36
- Dialing and Saving Phone Numbers with Pauses 37
- 4-Digit Dialing 38
- Calling Emergency Numbers 38
- Dialing from the Internal Phone Book 38
- Using One-Touch/Two-Touch/Three-Touch Speed Dialing 39
- Displaying your Phone Number 39

5. Navigating Through Menus and Entering Text 41

- Menu Navigation 42
- Working within the Menu Structure 43
- Viewing the Menus 44
- Entering text, numbers or symbols 44
- Selecting a Text Input Mode 44
- Alphabetical Text Entry 45
- Numbers and Symbol Entry 46
- T9® Text Entry 46

6. Adjusting Volume 49

- Changing Ringer Volume 50
- Silencing (or Muting) the Ringer 50
- Adjusting Volume During a Conversation 51
- Muting a Call 51

7. Using Sprint PCS Service Features 53

- Using Caller ID 54
- Responding to Call Waiting 54
- Three-Way Calling 55
- Forwarding your Calls 56

8. Managing Messaging 57

- Setting up Voicemail 58
- Message Types 58
- Knowing When you Have Messages 59
- Sending Sprint PCS Wireless Web Messages 59
- New Voicemail Message Alerts 60
- Retrieving your Voicemail Messages 60
- Clearing the Message Icon 60
- Incoming messages 61
- Reviewing Numeric Pages and Sprint PCS Wireless Web Messages 61
- Message options 62
- Erasing individual messages 63
- Erasing all Page/Text or Web Alerts 63
- Message ringing 63
- Message memory capacity 64
- Messages and Lock mode 64
- Checking Messages while your phone is In-Use 64

9. Managing Call History 65

- Viewing a Call Log (Incoming, Outgoing and Missed) 66
- Call Log Options 67
- Making a Call from a Call Log 67
- Prepending a Phone Number from a Call Log 67
- Saving a Phone Number from a Call Log 68
- Erasing Call Logs 69
- Reviewing Airtime 69
- Keeping Track of Your Calls while Your Phone is in-use 70

10. Using your Internal Phone Book 71

- Adding a New Internal Phone Book Entry 72
- Finding Internal Phone Book Entries 73
- Adding a new phone number to an existing entry 74
- Shortcuts for storing phone numbers 75
- My Sprint PCS Phone Number 75
- Storing phone numbers at the end of a call 75
- Prepend a phone number 76
- Adding a Name Ringer 76
- Editing Internal Phone Book numbers 77
- Secret Internal Phone Book numbers 77
- Erasing Internal Phone Book entries 77
- Erasing the Internal Phone Book 78
- Set Speed Dial 78
- Dialing Numbers from Your Internal Phone Book 78
- Dialing Sprint PCS Services 79
- Using your Internal Phone Book while Your Phone is In-Use 80

11. Changing your Phone's Settings 81

- Backlight Control 82
- Personal Greeting 82
- Contrast Control 82
- Setting the language of your phone 83
- Ringer Options 83
- Ringer Type Setting for Voice Calls 83
- Ringer Volume Setting for Voice, Data, and Fax Calls 84
- Ringer Type Setting for Message Notifications 84
- Ringer Volume Setting for Message Notifications 85

- Ringer Type Setting for Your Alarm 85
- Ringer Volume Setting for Your Alarm 86
- Ringer Type Setting for Data/Fax Calls 86
- Ringer Type Setting for Roaming Calls 86
- Data/Fax Mode 87
- Receiving a Fax or Data Call 87
- Changing Your Phone Back to Voice Calling 88
- Ending a call 88
- Setting the TALK Key One-Touch Access 88

12. Setting your Phone's Security 89

- Accessing the Security Menu 90
- Locking your Phone 90
- Unlocking your Phone 90
- Changing the Lock Code 91
- Dialing in Lock mode 91
- Special numbers 91
- Storing special numbers 92
- Dialing special numbers in Lock mode 92
- Resetting your phone 92
- Erasing Your Internal Phone Book 93

13. Personal Information Management (Calendar) 95

- Calendar 96
- Today 96
- To view an event: 97
- To Add, Edit or Erase Events: 97
- Month View 97
- To view, add, edit or erase an event on your Calendar: 98
- Jump To Date 98
- To Do List 99
- To view, edit, add or erase To Do List items 99
- Count Down 99
- Alarm Clock 101
- World Clock 102
- Set Time 103
- Calculator 103
- Using your Calendar while your phone is In-Use 105

14. Using the Voice Services of your Sprint PCS Phone 107

- Voice-activated dialing 108
- Programming the Phone For Voice-activated Dialing 108
- Setting-up voice-activated dialing 109
- Placing a call using voice dialing 110
- Reviewing voice dialing entries 110
- Erasing voice dialing entries 110
- Voice memo 111
- Recording a voice memo 112
- Reviewing a voice memo 112

15. Experiencing Sprint PCS Wireless WebSM 115

- The Sprint PCS Wireless Web 116
- The Sprint PCS Wireless Web Browser 116
- Launching a Sprint PCS Wireless Web Browser Session 116
- Web Guard 119
- Using the Sprint PCS Wireless Web Browser 120
- Setting up a Sprint PCS Wireless Web Connection 125
- Accessing Sprint PCS Wireless Web Updates 128
- Navigating the Sprint PCS Wireless Web Browser 129

16. Selecting your Accessories. 131

- Accessory Options 132
- How to Order 133

17. Knowing Performance and Safety Guidelines 135

- Getting the Most Out of your Reception 136
- Maintaining Safe Use of and Access to your Phone 138
- Caring for the Battery 141
- Acknowledging Special Precautions and the FCC Notice 142
- Sprint PCS Phone and Battery Specificatons 143
- Owner's Record 144
- User Guide Proprietary Notice 144

18. MP3 Player. 145

- Getting Started 146
- Installing MusicMatch Jukebox 149
- Downloading MP3 Music Files 150
- Playing MP3 Music 152
- Using the Phone Keys 154

- Answering or Making a Call with the Remote Control 155
- MP3 Player Menus 155
- Solving Problems 156
- Remarks on Copyrights 157
- Safety 157

Welcome to Sprint PCS

Sprint PCS built the only all-digital, all-PCS nationwide network from the ground up for clearer calls, serving more than 300 major metropolitan areas. We built our network to give you what we believe you really want from a wireless phone: clear sound, private conversations and time-saving features.

And Sprint Personal Communications Services® can do something even more far-reaching – simplify your life. Our advanced technology is designed to grow with your communications needs so that one day, you'll be able to rely entirely on your Sprint PCS Phone™ to stay connected.

This guide will introduce you to our technology and your new Sprint PCS Phone through simple, easy-to-follow instructions. Since you're probably anxious to start using your phone, we encourage you to immediately flip to Section One – Getting Started With Sprint PCS Service. This section provides all the information you need to quickly activate your phone, set up your voicemail and much more. It also contains information on how to contact Sprint PCS should you have questions about service, want to purchase additional products or services, or just check your account balance.

Thank you for choosing Sprint PCS.

Getting Started with Sprint PCS Service

In this Section

- Activating your Phone
- Setting up your Voicemail
- Getting Help
- Understanding this User Guide

This section walks you through the step-by-step basics of setting up service for your Sprint PCS Phone™, including activating or unlocking your phone, selecting your Sprint PCS Service Plan, receiving your new Sprint PCS Phone Number, and setting up your voicemail.

Once you have completed this section, you're ready to explore the advanced features of your new phone.

Determine if your Phone is Already Activated

If you received your phone in the mail or purchased it at a Sprint PCS Center, it probably has been activated. You may need to do is unlock your phone.

Tip

If you can't recall your lock code, try using the last four digits of either your Social Security number or Sprint PCS Phone Number or try 0000. If none of these work, call Sprint PCS Customer Care at 1-888-211-4PCS (4727).

Unlocking your Phone

Follow these steps to unlock your phone:

1. Press END to turn the phone on.
2. Press MENU .
3. Enter your four-digit lock code. For security purposes, the code is not visible as you type.

Activating your Phone

There are two ways to activate your phone. Follow these steps:

- The fastest way is to call from your new Sprint PCS Phone™.

1. Fully charge your battery (see instructions on page 19).
2. Turn on your Sprint PCS Phone.
3. Press * 2 ABC TALK to reach a Sprint PCS Customer Advocate. You must be in a Sprint PCS Service Area when making this call.

- The other way is to call Sprint PCS Customer Care from any phone other than your new Sprint PCS Phone (which isn't yet activated). Call us toll-free at 1-888-715-4588.

During this call you will be guided through the activation process. The call typically takes approximately 30 minutes, but could take longer during peak times. You can streamline the process by reviewing the Clear and Simple Facts brochure and pre-selecting your Sprint PCS Service Plan.

Note:

The activation process varies in certain Affiliate areas.

What you Should have Handy When you Call:

- Your new Sprint PCS Phone
- The original packaging from your phone
- Your Social Security number or Tax ID number
- Your driver's license number
- Pen and paper to write down your new Sprint PCS Phone Number

Setting Up your Voicemail

All unanswered calls to your Sprint PCS Phone are automatically transferred to voicemail, even if your phone is off or in use. To avoid missing any important messages, you will want to set up your Sprint PCS voicemail box and personal greeting as soon as your Sprint PCS Phone is activated.

To set up voicemail:

1. Press and hold OK .
2. Follow the system prompts to create your passcode, record your greeting, record your name announcement and choose whether to activate One-Touch Message Access (a feature that lets you press one key to access messages and bypasses the need for you to enter your passcode).

Note:

The voicemail setup process may vary in certain Affiliate areas.

Getting Help

Visit our Web Site

Stop by www.sprintpcs.com to get up-to-date information on Sprint PCS. You can also:

- Review coverage maps
- Learn how to use voicemail
- Access your customer account
- Purchase accessories
- Add additional options to your service plan
- Check out frequently asked questions
- And much more

Sprint PCS Customer Care

Tip:

If you need to reach Sprint PCS Customer Care while you are off the Sprint PCS Network, dial 1-888-211-4PCS (4727).

Sprint PCS Customer Advocates are available to assist you 24 hours a day, seven days a week. Simply dial 1-888-211-4PCS (4727) from any phone, or press MENU 2 ABC TALK from your activated Sprint PCS Phone while on the Sprint PCS Nationwide Network.

Once you dial Sprint PCS Customer Care, you can access a number of helpful account services through our automated Customer Care line. By following the voice prompts, you'll be able to learn more about Sprint PCS Products and Services, get Sprint PCS coverage by zip code or request a copy of your invoice.

Receiving Automated Billing Information

Note:

This service may not be available in all affiliate markets.

For your convenience, your phone gives you free access to billing information on your Sprint PCS account. This information includes balance due, payment received, billing cycle and the amount of minutes used since your last billing cycle. Follow these steps to access this information:

1. Press MENU 4 GHI TALK .
2. Follow the voice prompts to receive the information you want.

Sprint PCS Directory Assistance

Sprint PCS Directory Assistance provides a variety of services, including: residential, business and government listings; assistance with local or long-distance calls; movie listings; hotel, restaurant and shopping information and major local event information. There is a per call charge and you will be billed for airtime.

▲ Press [*] [4 GHI] [1] [1] [TALK] .

Sprint PCS Operator Services

Sprint PCS Operator Services can provide assistance in placing collect calls or calls billed to a local telephone calling card or a third party.

1. Press [0] [TALK] .
2. For more information or to see the latest in products and services, visit us online at www.sprintpcs.com.

Note:

Sprint PCS Operator Services may not be available in all affiliate markets.

Understanding this User Guide

This user guide introduces you to our technology and all the advantages of your new Sprint PCS Phone – through easy-to-follow instructions.

- Sections breakdown categories of information to progressively take you all the way from learning the basics to using the most advanced phone features.
- Tips highlight special shortcuts and timely reminders to help you make the most of your new phone.
- The Index helps you find specific information quickly.

We know that your time is valuable and that's why we've designed this guide to be used in a building block format or in stand-alone sections. You'll get the most out of your phone if you read each section. However, if you'd like to get right to a specific feature, you'll be able to locate the specific section using the colored tabs. Follow the instructions in that section and you'll be ready to use your phone in no time.

2

Getting to Know your Sprint PCS Phone™

In this Section

- Your Phone's Highlights and Features
- Viewing the Display Screen
- Turning your Phone ON and OFF
- Using the Battery

Your Sprint PCS Phone is packed with features that can simplify your life and expand your ability to stay connected to the people and information that are important to you. We know that you're anxious to start using it, so this section will give you a quick introduction to your new phone. Easy-to-follow instructions will guide you through the basics of the most common features of your phone and you'll be on your way to using it in no time.

Don't forget the other chapters in this guide. They're filled with information about the capabilities and benefits of your new Sprint PCS Phone. They include detailed step-by-step instructions to familiarize you with all the features, and how to customize your phone to meet your specific needs.

Highlights

Congratulations on the purchase of your Sprint PCS Phone™ - the UPRoar by Samsung (model SPH-M100). This phone is lightweight, easy-to-use, reliable and offers many significant features including being an MP3 music file player ! Here is a list of the Uproar's features.

- Dual-band capability provides access to other PCS CDMA and analog cellular networks where Sprint PCS has implemented roaming agreements (page xx).
- Sprint PCS Wireless Web℠ connection offers wireless modem capabilities for your personal computer (page xx).
- Sprint PCS Wireless Web℠ Browser provides access to the wireless Internet in digital mode (page xx).
- MP3 music player with stereo headphones and remote control. Up to 2 hours of music file storage (page xx).
- User friendly, menu driven access to features and options (page xx).
- Active flip can be set to answer an incoming call when opened and to cancel a call when closed (page xx).
- Backlit Display Screen makes it easy to read the display in low light environments and at night (page xx).
- Internal Phone Book with 229 memory registers. Name entries can have up to 6 numbers.
- Speed dialing, 4 methods of calling numbers stored in the Internal Phone Book (page xx).
- Calendar function allows you to schedule events, create To-Do Lists, set timers and alarms and to find out what time it is in any of the 24 programmed time zones (page xx).
- Voice activated dialing with 20 locations (page xx).
- T9 predictive text entry for ease in entering names and events into the Internal Phone Book and Calendar (page xx).
- USB connection for fast transfer of MP3 music files to your phone.

- Voice memo recording allows you to record a up to five personal memos, a total of five minutes of voice recording (page xx).
- Vibrate Alert makes you aware of incoming calls and messages without disturbing people around you (page xx).
- Multi-lingual - your menus and displays can be displayed in either English or Spanish (page xx).

Front View of Phone

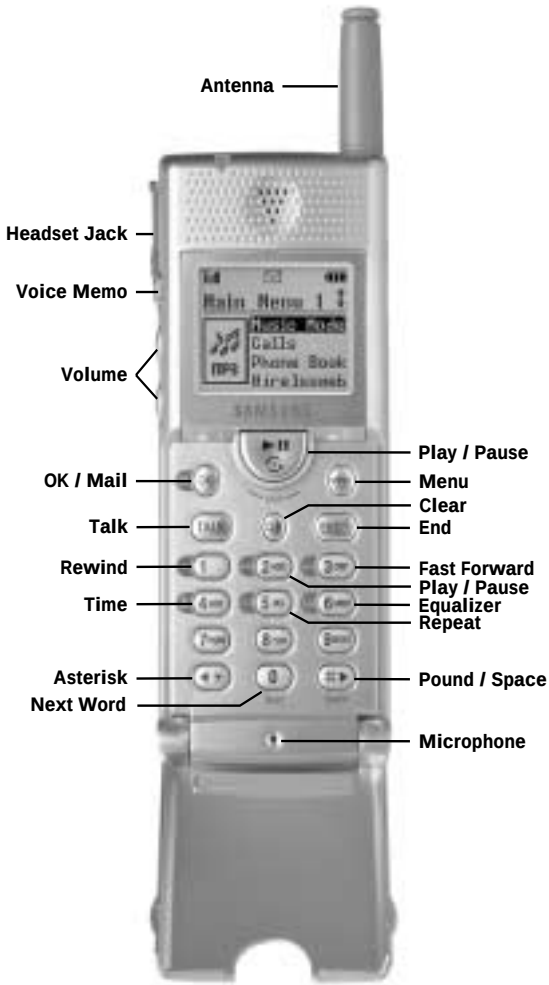

1. MENU : Displays the Main Menu of options on your phone. Press and hold to scroll through the Main Menu options.
2. : Begins and pauses playing of music. When in menu facility, press to scroll forward through menu options.
3. OK : In Standby mode, enters the messages menu. While displaying a menu, it selects the highlighted option.
4. TALK : Makes or answers a call. In Standby mode, press once to enter the outgoing call log.
5. CLR : Deletes characters from the display. While in menus, press to return to the previous menu.
6. END : Ends a call. Also, switches the phone on or off when pressed and held briefly. In the menu facility, returns the phone to Standby mode and cancels your input.
7. 0 through 9WXYZ : Use to enter numbers, letters and characters. Some of these keys also have special functions while in MP3 music mode.
8. 1 Backup : skips to the beginning of the current music track or to the previous track. When pressed and held during playback it searches backward.
9. 2ABC Play/Pause : begins playing of music. Press to pause a song that is playing, press again to resume play.
10. 3DEF Forward : skips forward to the next music track or searches forward when pressed and held during playback.
11. 4GHI Time : displays the Total and elapsed play time of the current track.
12. 5JKL Repeat : Sets the repeat mode, which includes a “Random” function.
13. 6MNO Equalizer : Displays the current equalizer setting and allows for changing the equalizer setting.

14. : Enters the [*] character for calling features and can be used to scroll backward through the menu facilities.
15. : Displays the next or alternate word form found in T9 text entry mode.
16. : Enters the [#] character for calling features and can be used to scroll forward through the menu facilities. While in text entry mode, press to enter a space.
17. Volume keys: (On the side of your phone). In Standby mode, adjusts the ringer volume. During a conversation, adjusts the voice volume. In a menu, scrolls up or down through the menu options.
18. Voice Memo: (On the side of the phone). In Standby mode, records a voice memo. During a conversation press to record part of the conversation.
19.

Earphone/Remote: (On the side of the phone). Allows you to plug in earphones for listening to conversations or music and to plug in the MP3 Player Remote. Standard 3.5mm headphones can also be plugged in.
20. Accessory connector: Used to connect your phone to one of the recommended battery chargers and to the MP3 data cable.

Viewing the Display Screen

This list identifies the symbols you'll see along the top line of your display.

- provides an approximate indication of signal strength.
  The more bars you have, the stronger your signal.
- means your phone cannot find a signal because you are outside of a service area. You cannot make or receive calls.
- tells you a call is in progress.
- indicates you are "roaming" off the Sprint PCS Nationwide Network.
- indicates you are "roaming" off the Sprint PCS Nationwide Network on an analog system.
- indicates you have voicemail messages waiting. Press and hold OK to call your voicemail box.
- indicates you have a numeric page or Sprint PCS Wireless Web message.
- indicates your phone is in vibrate mode.
- shows your current battery charge strength. (Icon shown represents a fully charged battery.)

Tip:

Display indicators let you know when you're off the Sprint PCS Nationwide Network and whether you're operating in digital or analog cellular mode.

Turning your Phone ON and OFF

Turning your Phone ON

To turn your phone on, press END .

Once your phone is ON, it displays "Searching" while your phone looks for a signal. When your phone finds a signal, it automatically enters Standby mode – the phone's idle state. At this point, you're ready to begin making and receiving calls.

Tip:

The Power Save feature helps to conserve your battery power when you are in an area where there is no signal.

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. When a signal is found, your phone returns to Standby mode.

Your phone searches for a signal periodically without your intervention. You can also initiate a search for Sprint PCS Service by pressing any key (when your phone is turned ON).

Turning your Phone OFF

Press END for two seconds until the power off graphics begin to display.

Your screen remains blank while your phone is off.

Using the KeyGuard

The KeyGuard feature helps avoid accidental key presses without blocking incoming calls or messages. KeyGuard is disabled when you receive an incoming call and is reactivated when the call is complete.

1. To activate the KeyGuard, highlight KeyGuard in the main menu and press OK, or you can press MENU and 0.
2. To disable the KeyGuard, press and hold .

Using the Battery

Battery Capacity

Your Sprint PCS Phone is equipped with a Lithium Ion (LiIon) battery. It allows you to recharge your battery before it is fully drained without any long term impact on the battery. The battery provides approximately xx hours of continuous digital talk time (xx hours in analog) or approximately xx hours of continuous digital standby time (xx hours in analog).

The Empty Battery Icon

Two to three minutes before the battery charge level gets too low to operate the phone, the battery sensor will let you know by blinking an empty battery icon ( ), sounding an audible alert and displaying a warning message. If you continue to operate the phone without charging, the phone will turn off automatically (after the two to three minute delay). If this happens your call will be ended. If you plug into a charging device, you can continue your call. Be sure to monitor the battery strength icon and make sure your battery is adequately charged.

Note:

Long backlight settings, searching for service, vibrate mode and MiniBrowser use affect the battery's talk and standby times.

Tip:

Be sure to charge your phone's battery and watch your indicator to ensure your levels are OK.

Installing the Battery

Your Sprint PCS Phone comes with a LiIon battery. Follow these steps to install it:

1. Hold the battery so that the metal contacts on the base of the battery line up with the metal contacts on the base of the phone.
2. Place the battery on the back of the phone with the top of the battery about 1/4 inch to 1/2 inch from the battery latch.
3. Gently push the battery toward the top of the phone until it snaps into place.

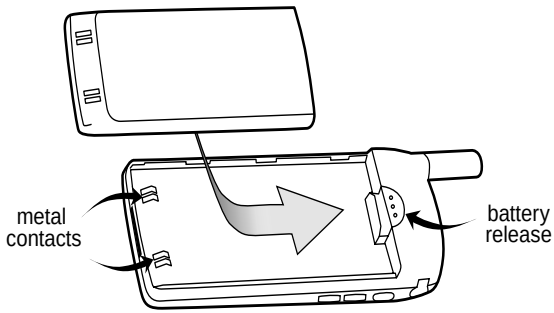

Removing the Battery

To remove your battery follow these easy steps:

1. Power off your phone by briefly pressing the END key.
2. Press the battery release latch (see illustration) and slide the battery away from the latch.

3. Lift the battery away from the phone.

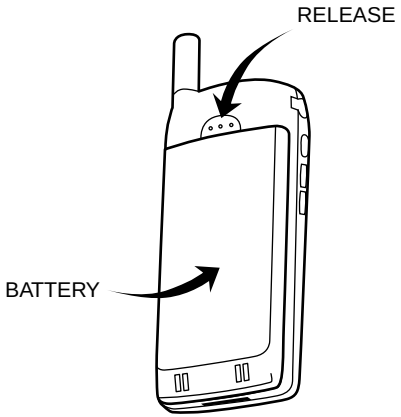

Charging the Battery

Your Sprint PCS Phone comes with a rechargeable battery. You should charge the battery as soon as possible so you can begin using your phone.

Keeping track of your battery's charge is important. If your battery level becomes too low, your phone automatically turns off and you'll lose everything you were just working on. For a quick check of your phone's battery level, glance at the battery charge indicator located in the upper-right corner of your phone's display screen. If the battery charge gets too low, an empty battery icon ( ) blinks and the phone sounds a warning tone.

Always use the Sprint PCS-approved desktop charger, travel charger or cigarette lighter adapter to charge your battery.

Warning!

Using the wrong battery charger could cause damage to your phone and void the warranty.

Using the Dual-Slot Desktop Charger

When you're ready to charge your battery, it is vital that you use only Sprint PCS-approved desktop chargers and travel chargers. To use the desktop charger provided with your phone:

1. Plug the power cord of the charger into a wall outlet.
2. There are three possible charging configurations. Choose the one that suits your needs:

- Insert the phone (with the battery installed) into the front slot of the charger.
- Insert a single battery (alone, not attached to the phone) into the rear compartment of the charger.
- Insert a single battery into the rear compartment and your phone (with battery attached) into the front compartment.

The LEDs on the front of the charger indicate the following:

- A **red light** on the charger lets you know the battery is charging.
- A **green light** lets you know that the battery is at least 90 percent charged.
- A **yellow light** indicates that the battery is operating at a temperature that is too high or too low, or that there is a poor connection. Check the phone to make sure it is properly positioned in the charger.

It generally takes about xx hours to fully recharge a completely rundown battery. With the Sprint PCS-approved Lilon battery, it is okay to recharge the battery before it becomes completely run down.

To get the quickest charge for any battery:

- Turn the phone off.
- Put the phone with the battery attached, into the front slot of the charger.
- Do not put a battery into the rear slot of the charger.

- When two batteries are in the charger, the batteries charge simultaneously, but charging time increases for both batteries.
- Leaving batteries in the charger once fully charged will not hurt the batteries.

3

Understanding Roaming

In this Section

- **Understanding How Roaming Works**
- **Understanding the Difference Between Roaming and Sprint PCS Network Calls**
- **Setting your Phone's Roam Mode**
- **Setting and Using Call Guard**

Roaming is the ability to make or receive calls while you're off the Sprint PCS Nationwide Network. Your new dual-band Sprint PCS Phone™ works anywhere on the Sprint PCS Nationwide Network and allows you to roam on analog cellular and digital networks virtually anywhere in the U.S. where competitive wireless service is available.

This section explains how roaming works as well as special features that let you manage your roaming experience.

Understanding How Roaming Works

Tip:

Remember, when you are using your phone off the Sprint PCS Network, always dial numbers using 11 digits (1 + area code + number).

Note:

You will pay a higher per-minute rate for roaming calls.

Recognizing Icons on the Display Screen

Your phone's display screen always lets you know when you're off the Sprint PCS Network and whether your phone is operating in analog cellular or digital mode. The following indicates what you'll see depending on where you're using your phone:

- Sprint PCS Nationwide Network - A and R are not displayed.
- Other CDMA networks - only R displays.
- Analog Cellular Networks - both A and R display.

Roaming on Other PCS CDMA Networks

When you're roaming on other PCS CDMA networks, your call quality will be similar to the quality you receive when making calls while on the Sprint PCS Network. You may not be able to access certain calling features, such as Sprint PCS Wireless Web, however, all of your calls are still private and secure.

Roaming on Analog Cellular Networks

When you roam on analog cellular networks, you will experience the same quality provided by analog cellular carriers today. Although most calling features, such as Sprint PCS Wireless Web, may be unavailable, you can still make and receive calls. You will experience a few differences including:

- You are more likely to experience static, cross-talk, fade-out and dropped calls.
- Some features that are standard on the Sprint PCS Network are unavailable.
- There are security and privacy risks (eavesdropping and cloning) that exist with conventional analog cellular services today.
- Your battery needs recharging sooner when you use your phone for analog cellular roaming.

Tip:

If you're on a call when you leave the Sprint PCS Network and enter an area where roaming is available (whether CDMA or analog cellular), your call is dropped. If your call is dropped in an area where you think Sprint PCS Service is available, turn your phone off and on again to reconnect to the Sprint PCS Nationwide Network.

Setting your Phone's Roam Mode

Your Sprint PCS Phone allows you to control your ability to roam. By using the Roaming menu option, you determine which signals your phone accepts.

Set Mode

Choose from three different settings on your dual-band phone to control your roaming experience:

1. From the main menu, highlight Roaming, and press OK, or press MENU 6 MNO and OK.
2. Highlight Set Mode and press OK.
3. Press the scroll keys to display all options. To select an option, highlight it and press OK.

- Sprint PCS: This setting allows you to select the Sprint PCS Nationwide Network only and prevents roaming on other networks.
- Automatic: This setting seeks Sprint PCS Service. When Sprint PCS Service is unavailable, it searches for an alternative system (for example, and analog cellular signal). The phone defaults to this setting at power up.
- Analog: This setting forces the phone to seek an analog roaming system. The Automatic setting is restored the next time the phone is turned on.

Setting an Alert When Roaming Charges Apply (Call Guard)

In addition to the roaming icon, Call Guard alerts you when roaming charges apply. The following settings apply to Call Guard.

Call Guard

This feature makes it easy to control when you roam by reminding you when you make or receive a roaming call. It also requires you to take additional steps before placing or answering a roaming call. These additional steps are not required when you make or receive calls while on the Sprint PCS Nationwide Network.

To Turn the Call Guard Feature On or Off:

1. From the main menu, highlight Roaming and press OK.
2. Highlight Call Guard and press OK or press 2 ABC.
3. Highlight Yes or No and press OK.

To Place Roaming Calls with Call Guard On:

1. From the main menu, dial 1 + area code + the seven-digit number. (You can also initiate a call from the Internal Phone Book, Call History, numeric pages or Sprint PCS Wireless Web messages.)
2. A message appears indicating that higher charges may apply to this roaming call. Press 1 to make the call.

Note:

Speed Dialing is not available when you are roaming with the Call Guard enabled.

To Answer Incoming Roaming Calls with Call Guard On:

▲ A message appears indicating that higher charges will apply to this call. Press 1 to answer the call.

Remember if the Call Guard feature is set to Yes (On), you need to take extra steps to make and receive roaming calls even if you have selected the Analog Only setting (see page 26).

Setting the Time and Date in Analog Mode

Note:

If you do not enter the time and date when prompted in Analog mode, you are not notified of scheduled events or call alarms.

If the time has not been set since the battery was installed and you turn your phone on outside a Sprint PCS Service Area, you are prompted to enter the current time and date when a calendar or time related function is requested.

To enter the time and date when the Set Time and Date menu displays, press the appropriate keys on your keypad. Fields must be two digits, for example "05:07A 01/01/99."

4

Making and Answering Calls

In this Section

- **Making Calls**
- **Answering Calls**
- **Dialing Options**
- **In-Call and End-of-Call Options**
- **Using One-Touch/Two-Touch/Three-Touch Speed Dialing**

Your Sprint PCS Phone™ gives you different options for making calls so that you can use the method that works best for you. Once you learn the basics here, the possibilities are endless.

Making Calls

Tip:

To redial your last outgoing phone number, press TALK twice.

Tip:

When making calls off the Sprint PCS Network, always dial using 11 digits (1 + area code + phone number).

Your Sprint PCS Phone™ offers many different ways to make calls, including Voice dialing (page xx), Speed Dialing (page xx) and using Call History (page xx).

To make a call using your keypad:

1. Make sure your phone is on.
2. Enter a phone number. If you make a mistake while dialing, press CLR to erase one digit at a time. Or, press and hold CLR to erase the entire number.
3. Press TALK. To make a call when you are roaming and Call Guard is enabled, your phone prompts you to press [1] to make the call. (See "Call Guard" on page xx.)
4. When you're finished, press END.

Answering Calls

Note:

You can also answer a call by pressing any key if this option is turned on. See Any Key Answer on page xx.

1. Make sure your phone is on. If your phone is off, incoming calls go to voicemail.
2. When your phone rings, simply open the flip or press TALK. To answer incoming calls when you are roaming and Call Guard is enabled, press 1. (See "Call Guard" on page xx.)
3. To disconnect the call, press END.

Missed Call Notification

Note:

You cannot dial phone numbers identified as No ID, Restricted, Data or Fax calls.

When an incoming call is not answered, the Missed Call Log is displayed on your screen.

To display the Missed Call entry:

- From the Main Menu press 1 3 DEF. Highlight the missed call entry and press OK to see all the information available, or press TALK to be immediately connected.

Dialing Options

Dialing options are displayed when you enter numbers in the main menu.

To select an option, highlight it and press OK.

- Call to dial the phone number. (If you are roaming and have the Call Guard feature activated, select Roam Call. See "Call Guard" on page xx.)
- Save to save the phone number in your Internal Phone Book. (See "Saving a Phone Number" on page xx.)
- Find to display Internal Phone Book entries that contain the entered numbers. (See "Finding a Phone Number" on page xx.)
- Hard Pause to insert a hard pause. (See "Dialing and Saving Phone Numbers with Pauses" on page xx.)
- 2-Second Pause to insert a 2-second pause. (See "Dialing and Saving Phone Numbers with Pauses" on page xx.)

Tip:

To speed dial a phone number from Standby mode, press and hold the Internal Phone Book entry number. If the entry number is two digits, enter the first digit, then press and hold the second digit (the same is true for three digit entries 100-229; just press the first two digits then press and hold the last digit). (This feature will not work when you are roaming and Call Guard is enabled.)

In-Call Options

During a call, press MENU to view the following In-Call options.

To select an option, highlight it and press OK .

- Mute or Unmute
  Select Mute to mute your phone's microphone. Select Unmute to reactivate the microphone.
- Calls
  Select Calls to view your call history. This is useful when you are looking for the phone number of a person who you recently called or recently called you.
- Messages
  Select Messages to view your message inbox (See "Messages" on page xx.)
- Phone Book
  Select Phone Book to view your Internal Phone Book while on a call.
- Calendar
  Select Calendar to view your personal information entries while on a call. (See "Calendar" on page xx.)
- Version
  Select Version to view the hardware and software versions of your phone while on a call. (See "Viewing your Software and Hardware Versions" on page xx.)

Incoming Call Notification

Your Sprint PCS Phone signals an incoming call or message in the following ways:

- The backlight illuminates.
- The red LED on the top of the handset flashes.
- The ringer sounds (unless you have set the ringer to Vibrate or Off).

Incoming call notification continues until one of the following events occurs:

- You answer the call.
- You press to silence the ringer before answering the call.
- The calling party ends the call.
- The call is sent to Sprint PCS Voicemail.

Your Sprint PCS Phone provides the following voice call notification features.

- Six ring volume settings including Vibrate, Off and 1-Beep.
- Nine unique ring types and four melody tones (see "Ringer type setting for voice calls" on page xx).
- Name display with Caller ID (if the name is programmed into your Internal Phone Book).
- Automatic storage of an incoming call's information in the Call Logs (the last 10 calls you answered are stored in the Incoming Call logs and the last 10 calls you missed are stored in the Missed Call Logs). See "Missed Calls" on page xx.

The ringer mute (or silence) option is also displayed. Press to silence the ringer.

End-of-Call Options

Note:

The End-of-Call options are not displayed for calls identified as No ID or Restricted.

After receiving a call from or making a call to a phone number that is not in your Internal Phone Book, the phone number and the duration of the call are displayed.

Press:

- END to return to Standby mode.
- TALK to dial the phone number.
- OK to save the phone number in your Internal Phone Book. (See "Saving a Phone Number" on page xx.)

After receiving a call from or making a call to a phone number that is in your Internal Phone Book, the Internal Phone Book entry name, phone number, and the duration of the call are displayed.

Press:

- END to return to Standby mode.
- TALK to dial the phone number.
- MENU for more options.

Saving a Phone Number

Your Sprint PCS Phone can store up to 229 Internal Phone Book entries. Phone Book entries can store up to a total of 6 phone numbers and the entry's name can contain 12 characters.

To save a number from the main menu:

1. Press 3 DEF for Phone Book.
2. Press 2 ABC for Add New Entry.
3. Enter a phone number by pressing the digit keys (you can enter up to 32 digits).

- To enter a pause press MENU. Press 1 to enter a Hard Pause, press 2 ABC to enter a 2 Second Pause. (p or T displays next to the phone number indicating either a Hard Pause or a 2 Second Pause).

4. Press OK to go to the next step.
5. Select a label by highlighting Home, Work, Mobile, Pager, Fax, or No Label and press OK.
6. Press OK to select Add New Name and create a new Internal Phone Book Entry.
7. Enter the name for the new Phone Book Entry (the default text entry mode is Alpha).
8. To accept the displayed location, press OK or to select another location scroll to the desired location and press OK.

To save a number on the display:

1. Press MENU 2 ABC.
2. Select a label by highlighting Home, Work, Mobile, Pager, Fax, or No Label and press OK.
3. Press OK to select Add New Name and create a new Internal Phone Book Entry.
4. Enter the name for the new Phone Book Entry (the default text entry mode is Alpha).
5. To accept the displayed location, press OK or to select another location scroll to the desired location and press OK.

Tip:

A phone number labeled Fax can only be dialed through a personal computer.

Tip:

A phone number labeled Fax can only be dialed through a personal computer.

After you have saved the number, the new Internal Phone Book entry is displayed. (See "Internal Phone Book Entry Options" on page xx.)

Finding a Phone Number

By Digit String

You can search for Internal Phone Book entries with phone numbers that contain a specific string of numbers.

To find a phone number by number string:

1. Enter one or more digits. The more numbers you enter, the more specific the search becomes.
2. Press MENU.
3. Highlight Find and press OK.
4. If more than one entry is found, scroll to the Internal Phone Book entry that contains the phone number and press OK, or highlight the entry and press TALK to dial the number.

By Internal Phone Book Location Number

To find a phone number by location number:

1. From the main menu, press 2 ABC for Phone Book.
2. Highlight Find Entry and press OK.
3. Press the corresponding digit keys to enter and display your desired location, or use the navigation keys to locate an entry. Make sure it is highlighted and then press OK to display the selected entry or TALK to be connected.

By Name

1. From the main menu press 2 ABC for Phone Book.
2. Highlight Find Name and press OK.

▶ Stored names display in an alphabetical list.

3. Using the alphanumeric keys, enter the first character of the name that you want to find in your Internal Phone Book. The phone searches for and displays the first Internal Phone Book entry beginning with the

character you entered. You can enter the second character of the name and your phone will display name entries beginning with the two characters you entered. You can also scroll through Internal Phone Book entries using the navigation keys.

4. When you find your desired entry, make sure it is highlighted, and then press TALK to place a call, or OK to edit the entry.

Dialing and Saving Phone Numbers with Pauses

You can dial or save phone numbers with pauses for use with automated systems, such as voicemail or credit card billing numbers. If you select a hard pause, the next set of numbers are sent when you press TALK. If you select a 2-second pause, your phone automatically sends the next set of numbers after two seconds.

Note:

You can have multiple pauses in a phone number and combine 2-second and hard pauses.

Storing an Internal Phone Book Entry with Pauses

1. Enter the phone number you want to store (such as the bank's teleservice phone number).
2. Press MENU. More options display. Highlight Hard Pause or 2-second pause and press OK. A hard pause is displayed as a "p" and a 2-second pause as a "T".
3. Enter the digits that need to follow the pause (such as your account number).

Store the number in your Internal Phone Book as you normally would by pressing the OK key and following the screen prompts.

When dialing a number with a hard pause(s), press TALK to send the next set of numbers.

4-Digit Dialing

Note:

4-Digit Dialing dials the first number in your Internal Phone Book that matches the four digits.

Your phone provides the option of dialing a number stored in the Internal Phone Book simply by dialing four digits. Enter any four consecutive digits of someone's phone number (for instance, the last four digits), then have your phone remember the rest of the number and dial it for you.

To place a call using four-digit dialing:

1. Dial any four consecutive digits of a phone number that you have stored in your Internal Phone Book. The stored phone number can be any length up to 32 digits.
2. Press TALK .

- If your Internal Phone Book has more than one phone number stored that contains the four digits, "Wait" and the number of matching entries found displays momentarily. The display changes to show the first number containing the four digits entered. Highlight the desired number, and then press TALK to be connected.

Calling Emergency Numbers

You can place calls to 911, (dial 9WXYZ 1 . 1 and press TALK) even if your phone is locked or your account is restricted.

IMPORTANT NOTICE! PLEASE READ!

Because of various transmission methods, network parameters, and user settings used to complete a call from your wireless phone, a connection cannot always be guaranteed.

Therefore, emergency calling may not be available on all wireless networks at all times.

DO NOT depend on this phone as a primary method of dialing 911 or for any other essential or emergency communications.

Dialing from the Internal Phone Book

To dial directly from an Internal Phone Book entry:

1. From the main menu, highlight Phone Book and press OK.
2. Select either Find Name or Find Entry to display the list of phone numbers stored in the Internal Phone Book.
3. Highlight the entry you want to call.
4. Press TALK to dial the entry's default speed dial number.

Using One-Touch/Two-Touch/Three-Touch Speed Dialing

With this feature, you can dial Speed Dial entries using one key press for locations 1-9, two key presses for locations 10-99, or three key presses for locations 100-229.

Note:

Speed Dialing is not active when you are roaming with Call Guard enabled.

To use One-Touch Dialing for Speed Dial locations 1-9:

▲ Press and hold the appropriate key for approximately two seconds.

▶ The display confirms that the number has been dialed when it shows "Connecting."

To use Two-Touch Dialing for Speed Dial locations 10-99:

1. Press the first digit.
2. Press and hold the second digit for approximately two seconds.

▶ The display confirms that the number has been dialed when it shows "Connecting."

To use Three-Touch Dialing for Speed Dial locations 100-229:

1. Press the first digit.
2. Press the second digit.
3. Press and hold the third digit for approximately two seconds.

▶ The display confirms that the number has been dialed when it shows "Connecting."

Displaying your Phone Number

Just in case you forget your own number, your Sprint PCS Phone can remind you.

To display your phone number:

1. Press MENU.
2. Highlight Phone Book and press OK or press 3 DEF .
3. Highlight My Phone# and press OK or press 3 DEF .
4. Press END to return to Standby Mode or wait a moment and your phone will return to Standby Mode automatically. You can also press OK or CLR to return to the Phone Book menu.

To view your phone number while on a call:

1. Press MENU.
2. Highlight Phone Book and press OK or press 4 GHI .
3. Highlight My Phone# and press OK or press 3 DEF .

5

Navigating Through Menus and Entering Text

In this Section

- Menu Navigation
- Shortcuts
- Viewing the Menus
- Entering Characters by Tapping the Keypad
- Entering Characters Using T9 Text Input
- Entering Symbols and Numbers

This section is a road map to using your phone and also shows how to enter characters in your phone. Every function and feature can be accessed through a menu. Take a few moments to know your way around and how to enter text. You'll find that it makes it easier to use and understand your phone.

Menu Navigation

Your Sprint PCS Phone allows you to scroll through menus quickly and easily. The scroll bar at the right of the menu keeps track of your position in the menu at all times. There a several ways in which you can scroll through or navigate menu options.

To scroll or navigate through the menus:

1. Press MENU to display the Main Menu options.

Scroll through menu options using one of the following methods:

- Press the to scroll forward through menu options.
- Press to scroll backward through menu options.
- Press to scroll forward through menu options.
- Press the upper the volume key to scroll forward through menu options.
- Press the lower volume key to scroll backward through menu options.

As you navigate through the menu, menu options are highlighted. Select an option by highlighting it and pressing OK .

Working within the Menu Structure

Selecting Menu Items

As you navigate through a menu, the options are highlighted. Select an option by highlighting it and pressing OK.

For example, if you want to view your last incoming call:

1. From the main menu, highlight Calls and press OK. (It may already be highlighted.)
2. Use one of the scroll keys to highlight Incoming and press OK. If you have received any calls, they are displayed on the screen.

Backing up within a Menu

To go to the previous menu:

▲ Press CLR.

To go to the main menu:

▲ Press CLR repeatedly until the main menu displays.

To return to Standby mode,

▲ Press and hold CLR or simply press END.

Viewing the Menus

Menu Diagram

Menus let you check or change your phone settings. The following outline shows the menu structure.

Call Logs
Outgoing Log
Incoming Log
Missed Log
Erase Logs
  Outgoing Log
  Incoming Log
  Missed Log
  All Logs

Entering text, numbers or symbols

At various times when using your phone, you will need to enter text. For example, when storing a name in the Internal Phone Book or entering events in your Calendar you will enter text.

Selecting a Text Input Mode

When prompted to enter text, the current text entry mode will appear above the MENU key in the lower right hand side of the display. There are four text entry modes:

- T9® Word
- Alpha
- Number
- Symbol

To change the Input Mode, press the MENU key.

When entering text, use the indicated key to perform the following text entry functions:

- press ▶II to change the text entry case (All CAPs, Initial Caps or lowercase).
- press 0 (Next) to cycle through candidate T9 word matches.
- press # (Space) to insert a space.

- Press 1 to enter a period (.) and other common symbols.

Alphabetical Text Entry

Alphabetical text characters may be entered in the alpha Input Mode by pressing the key corresponding to the letter that you want to enter. Three alpha modes are available to you:

- ABC (all capitals)
- Abc (first letter is capital)
- abc (all lowercase)

Tapping a given number key repeatedly changes between the characters represented by that key. Here is an explanation.

Entering Characters by Tapping the Keypad

To enter characters by tapping the keypad, select the alpha mode (see "Selecting a Text Input Mode" on page 44). Press the corresponding number key (1-9) key until the desired character appears. By default, the first letter of a word is capitalized and following letters are lowercase.

You'll notice that when tapping the following keys, the characters appear in the following order. To use this feature, you have to tap the key within about 2 seconds, otherwise the phone moves the cursor to the next space and waits for new input.

- 1 . , ' & - @
- 2 ABC A B C 2
- 3 DEF D E F 3
- 4 GHI G H I 4
- 5 JKL J K L 5
- 6 MNO M N O 6
- 7 PQRS P Q R S 7
- 8 TUV T U V 8
- 9 WXYZ W X Y Z 9

Numbers and Symbol Entry

Numbers and symbols are entered by changing to the appropriate Input Mode and pressing the soft key for the symbol you want or the digit key of the number you want.

T9® Text Entry

T9 word, T9 Text Input, enables you to easily enter text. T9 (for "text on 9 keys") requires only one key press per letter and quickly recognizes the most commonly used word of a numeric sequence. For example, to enter the word "hello," you can spell out the word by pressing only five keys, 4-3-5-5-6.

T9 Text Input knows the most commonly used sequence for that numeric sequence is "hello". If two or more words share the same numeric sequence, T9 software provides the most commonly used word, with the ability to scroll to the next most commonly used word by pressing 0. Press 0 repeatedly to display all of the available words that T9 knows. When the word you want displays continue to enter text in the same way or change to another text or character entry mode. If the word you want to enter is not known by T9 press MENU to change the Input Mode.

You can easily change the entry case of T9 by pressing until the entry case that you want displays. The T9 text entry case options display as follows:

- T9 WORD — All capital letters (all upper case).
- T9 Word — Initial capital letters (first letter is upper case).
- T9 word — All lower case (no capital letters).Your Sprint PCS Phone™ provides convenient ways to enter words, letters, punctuation and numbers.

Adjusting Volume

In this Section

- Changing Ringer Volume
- Silencing the Ringer
- Adjusting Volume During a Conversation
- Muting a Call

With all the things that demand your attention in today's fast-paced world, it's important to tune-in to what really matters. Your Sprint PCS Phone™ gives you the ability to control your phone's volume with the touch of a button. Not only can you control what you hear, you can also control what your caller hears.

Changing Ringer Volume

To change the ringer volume, adjust the volume keys on the side of your phone when the phone is in Standby mode.

To change the ringer volume from the main menu:

1. Press 9 WXYZ for Setup/Tool.
2. Press 1 for Sounds.
3. Press 1 for Ringer Volume.
4. Press 1 for Calls, 2 ABC for Messages, or 3 DEF for Alarms.
5. Press 1 to set the ringer type for calls with Caller ID or 2 ABC for calls no Caller ID information.
6. Press the scroll keys to select High + Vib, High, Med, Low 1-Beep, Vibrate, or Off.
7. When the desired ringer volume displays, press OK to save the setting.

Silencing (or Muting) the Ringer

When the phone is open and ringing, press END to silence the ringer. When the phone is closed and ringing, press or one of the volume keys to quickly silence the ringer.

You can also set the ringer to remain off. From Standby mode, press the down volume key until "Ring Vol Off" is displayed, or use the Main menu (see "Ringer type setting for voice calls" on page xx).

To silence the ringer on incoming calls:

1. When the phone rings, press a volume key, or END .
2. Press TALK or open the flip to answer the call.

Adjusting Volume During a Conversation

Whether you need to hear more or less of a conversation, adjust the volume keys on the side of your phone during a call.

Muting a Call

There are times when it's necessary to mute a call so that your caller does not hear you or certain background noise. To use this function during a call:

1. Press MENU.
2. Highlight Mute and press OK or press 1.

To unmute a call:

1. Highlight Unmute and press OK or press 1.

▶ When the phone is muted, "Mute" appears on the display.

7

Using Sprint PCS Service Features

In this Section

- Using Caller ID
- Responding to Call Waiting
- Three-Way Calling
- Forwarding your Calls

Now that you've mastered the basics, you can begin to focus on where you want to go. This section guides you step-by-step through the calling features that enhance your Sprint PCS Service. From Caller ID to Call Forwarding, using these features will help you make the most of your Sprint PCS Service.

Using Caller ID

Caller ID lets you know who's calling by displaying the number of the person calling when your phone rings. If the caller's name and number are already stored in your Internal Phone Book, the corresponding name appears with the number. In the same way, if you call someone who has this feature, your phone number displays on their phone.

To block your phone number from being displayed for a specific outgoing call:

1. Press * 6 MNO 7 PQRS .
2. Enter the number you want to call.
3. Press TALK .

To permanently block your number, call Sprint PCS Customer Care.

Responding to Call Waiting

Tip:

For those calls where you don't want to be interrupted, you can temporarily disable call waiting by pressing * 7 PQRS 0 before placing your call. Call Waiting is automatically reactivated once you end the call.

Call Waiting lets you receive a second call during conversation. When a Call Waiting call comes in, the incoming call alert sounds (this sound is audible to you but not your first caller), and a text notification displays.

Your Sprint PCS Phone provides the option of turning the Call Waiting feature on or off. Call Waiting is on by default. If you choose to have an undisturbed conversation, simply turn off the feature for the current call.

Answering a Call Waiting call

1. Press TALK . The phone connects the calling party and places the current party on hold.
2. Press TALK again to switch between the two parties.

If you do not respond to a Call Waiting notification, the phone logs the call in the Missed Calls Log and then sends the call to Sprint PCS Voicemail.

Disabling Call Waiting

To turn off Call Waiting on your next call:

Press * 7 PQRS 0 before dialing the number. When you complete your call and hang up, the Call Waiting feature is automatically turned back on.

To turn off Call Waiting permanently call Sprint PCS Customer Care.

Three-Way Calling

Three-Way Calling lets you talk with two different people at the same time. When you use this feature, you will be charged normal airtime rates for each of the two calls you make. The phone records each called party in the Outgoing Calls Log.

During a three-way call, if one of the people you called hangs up, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all three callers are disconnected.

There are two methods for making a three-way call; the TALK key method and by using the In-Use menu.

To place a three-way call using the TALK key method:

1. During a conversation, simply press TALK. The phone places the current call on hold.
2. Next, enter the number for the third party, and press TALK.
3. When you're connected to the third party, press TALK again to begin your three-way call.

To place a three-way call using the In-Use menu:

1. During a conversation, simply press MENU and 3 DEF for Three-Way Calling.
2. Next, enter the number for the third party, and press TALK. The phone places the current call on hold.
3. When you're connected to the third party, press TALK again to begin your three-way call.

Forwarding your Calls

Call Forwarding lets you forward all your incoming calls to another phone number – even when your phone is turned off. You can continue to make calls from your phone with Call Forwarding activated.

Note:

You are charged a higher rate during calls you have forwarded.

To Activate Call Forwarding:

1. Press MENU 7PQRS 2ABC.
2. Enter the area code and phone number to which your calls should be forwarded.
3. Press TALK. You will hear a tone confirming the activation of Call Forwarding.

To Deactivate Call Forwarding:

- Press MENU 7PQRS 2ABC 0.
- Press TALK. You will hear a tone to confirm the deactivation.

8

Managing Messaging

In this Section

- Setting up Voicemail
- Message Types
- New Message Alerts
- Message Options

Your Sprint PCS Phone™ is always working to help you stay connected even when you're unavailable. With four types of messaging, you can depend on your callers being able to notify you of important information. This section steps you through the messaging functions available on your phone including Sprint PCS Wireless Web Messaging.

Setting up Voicemail

Tip:

When you are roaming off the Sprint PCS Network, you may not receive notification of new voicemail messages. It is recommended that you periodically check your voicemail by dialing 1 + area code + your Sprint PCS Phone Number.

The first thing you'll want to do after activating your phone is to set up voicemail. See Section 1 on page xx for instructions.

Message Types

There are four types of messaging functions available on your Sprint PCS Phone. You can receive voicemail, numeric pages, Sprint PCS Wireless Web Messages and Sprint PCS Wireless Web Alerts as long as your phone has enough memory locations to store them.

Voicemail captures calls automatically when you can't answer your phone or it is turned off. The voicemail system sends a notification to your phone letting you know when you have new voice messages waiting in your voicemail box.

Numeric Paging (appears on your phone's menu as Page/Text messages) allows a caller to enter a phone number into your voicemail box instead of a voice message. The phone number appears on your phone as a numeric page.

Note:

Sprint PCS Wireless Web services may not be available in certain Affiliate areas.

Sprint PCS Wireless Web Messaging (appears on your phone's menu as Page/Text messages) displays short alphanumeric messages on your phone's display screen. You must purchase a Sprint PCS Wireless Web Messaging Option to receive text messages on your Sprint PCS Phone.

Sprint PCS Wireless Web Alerts (appears on your phone's display as Web Alerts) lets you know when you receive an alert from a web site. (Service may not be available at the time of printing.)

Knowing When you Have Messages

There are several ways your Sprint PCS Phone alerts you of new messages:

- By displaying a message on the screen.
- By playing the assigned ringer type.
- By the LED blinking red.
- By displaying at the top of your screen for voicemail messages, pages, Sprint PCS Wireless Web messages or Sprint PCS Wireless Web alerts.

Sending Sprint PCS Wireless Web Messages

There are three ways to send a Sprint PCS Wireless Web Message to a Sprint PCS Phone:

1. Email (your phone number @ messaging.sprintpcs.com).
2. Through the Sprint PCS web site – www.sprintpcs.com. Select the wireless web messaging link.
3. Using a messaging software (TAP 1.5 compatible).

New Voicemail Message Alerts

Tip:

Your phone accepts messages even when it is turned off. However, you are only notified of new messages when your phone is turned on and you are in a Sprint PCS Service Area.

When your voicemail box is empty and you receive a new voicemail message, your phone alerts you by displaying the icon. Press:

- CLR to clear the alert.
- TALK to dial your voicemail box.

Retrieving your Voicemail Messages

You can review your messages directly from your Sprint PCS Phone or from any other touch-tone phone. To dial from your Sprint PCS Phone, you can either speed dial your voicemail box or use the menu keys.

Note:

You are charged for airtime minutes when you are accessing your voicemail.

Using One-Touch Message Access:

- From Standby mode, press and hold OK. Follow the voicemail system prompts.

Using the Message Menu to Access your Messages:

1. From Standby mode press OK.
2. Highlight Voicemail and press OK.
3. Highlight Listen and press OK.

Using a Phone Other Than your Sprint PCS Phone to Access your Messages:

1. Dial your Sprint PCS Phone Number.
2. When your voicemail box answers, press #.
3. Enter your passcode.

Clearing the Message Icon

Your phone may temporarily continue to display the icon after you have checked your voicemail messages.

To clear the icon from the display screen:

1. From Standby mode press OK.
2. Highlight Voicemail and press OK.
3. Highlight Reset and press OK.

Incoming messages

Your phone receives incoming messages in both Standby and Talk modes. When you are on a call and receive a message, your phone sounds a tone (this is to avoid ringing in your ear while you are trying to talk).

Receiving a Message in Standby Mode

When your phone receives a message in Standby mode, the ringer sounds (unless turned off), and the screen displays ("New Voicemail", "New Text", "New Page" or "New BrowserMsg"). The message indicator (✉) displays and remains on the screen until you listen to the new voicemail message, or read the new Wireless Web message, numeric page, or Web Alert.

Receiving a Message While on a Call

If you receive a new Wireless Web message, Web Alert, or numeric page while on a voice call, a tone sounds and a message header displays. You can easily review the new message while on the call by just pressing OK. Your call will not be disconnected, and you can ask the other party to wait while you review the message. If you are using the optional hands-free headset, then you can read the message while continuing your conversation.

Reviewing Numeric Pages and Sprint PCS Wireless Web Messages

When the message arrives, you can immediately review it by pressing OK, or store the message for later review by pressing CLR. The Messages menu provides options for reviewing the sender's name, phone number, time / date stamp and the message.

Sprint PCS Wireless Web Message notification may not be available at time of printing.

To review a stored (or old) numeric page, Sprint PCS Wireless Web Message, or Web Alert from Standby mode:

1. Press OK to display the Messages menu. The number

of new (unread) messages displays next to the associated message type in the menu.

2. Press 2 ABC for Page/Text or 3 DEF for Web Alerts. A list of messages displays. An exclamation point (!) next to an entry indicates an urgent message. A check mark (√) next to an entry indicates that you have read the message.
3. Use the scroll keys to scroll the list of messages.
4. When the message displays, press OK to review the message. While reviewing the message, the scroll keys operate like this:

- Press ◀ * to page up in the current message.
- Press # ▶ to page down in the current message.

While reviewing a message, you can press MENU for more options. See “Message options” on page xx.

5. Press CLR to return to the previous screen.

Message options

The Messages menu provides a number of options while you are reviewing Sprint PCS Wireless Web Messages. You can return a call to the phone number in the message, save or erase the message, scroll to the next or previous message, or extract a phone number that is included in the message.

1. While reviewing a message, press MENU for options:

- Press 1 for Talk (to call the phone number).
- Press 2 ABC to Save the number (if there is no Internal Phone Book match).
- Press 3 DEF to Erase the message.
- Press 4 GHI to review the Next message.
- Press 5 JKL to review the Previous message.
- Press 6 MNO to extract a phone number that was included by the sender of the message. If more than one number was included by the sender, a list of the numbers is presented to you, and you can extract the one you want.

2. Press CLR to return to the previous screen.

- If the message you are reviewing contains a phone number that is already stored in the Internal Phone Book the Save option does not display, and the available menu options will be: (1) Talk, (2) Erase, (3) Next Msg, (4) Previous Msg.
- The message sender's name appears as stored in the Internal Phone Book.The message sender's name appears as stored in the Internal Phone Book.

Erasing individual messages

You can erase an individual Sprint PCS Wireless Web Message or numeric page after reviewing it. To erase a text or numeric page:

1. Press OK to display the Messages menu.
2. Press 2 ABC for Page/Text.
3. Use the navigation keys to scroll to the message you want to erase.
4. When the message is highlighted, press OK. The message header and body will display.
5. Press MENU for more options.
6. Press 3 DEF to erase the message or CLR to return to the Messages menu.

Erasing all Page/Text or Web Alerts

You can erase all numeric page messages or Web Alerts.

1. Press OK to display the Messages menu.
2. Press 4 GHI for Erase.
3. Press 1 for Page/Text or 2 ABC for Web Alert.
4. A confirmation displays. Press OK to erase all messages or CLR to return to the previous screen.

Message ringing

Your Sprint PCS Phone allows you to set a unique ring type for each type of incoming message: voicemail, wireless web or numeric page (see "Ringer type settings" on page xx).

Message memory capacity

Your Sprint PCS Phone can store up to 100 messages, depending on the length of the messages. When message memory reaches 75% capacity, the screen displays "Memory is 75% full. Erase old messages." At 100% capacity, the screen displays a text notification and rejects additional incoming messages until you erase the stored messages.

Messages and Lock mode

Incoming messages are received even when your phone is in Lock mode. The screen displays the time and date of the message, but you cannot access the message until the phone is unlocked.

Checking Messages while your phone is In-Use

Your phone's page and text messaging functions are available while you are on a call, and your phone is In-Use. To access your messaging functions while your phone is In-Use:

Press the MENU key for In-Use menu options.

Press for Messages. Select from the following functions:

- 1: Voicemail
- 2: Page/Text
- 3: Erase

9

Managing Call History

In this Section

- Viewing Call Logs (Incoming, Outgoing and Missed)
- Call Log Options
- Making a Call from a Call Log
- Saving a Phone Number from a Call Log
- Erasing Call Logs
- Reviewing Airtime
- Keeping Track of Your Calls While Your Phone is in Use

The call logs help you manage your time more effectively. They keep track of incoming calls, calls made from your Sprint PCS Phone™ and missed calls. This section guides you through accessing and making the most of your call logs.

Viewing a Call Log (Incoming, Outgoing and Missed)

You'll find your call logs invaluable. Your phone retains these three lists of Call Logs in memory:

- Incoming - the last 10 calls placed to your phone.
- Outgoing - the last 10 calls placed from your phone.
- Missed - the last 10 calls placed to your phone that you did not answer.

Call logs make redialing a number fast and easy. They are continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

Each entry contains the phone number (if it is available) and Internal Phone Book entry name (if the phone number is in your Internal Phone Book). Duplicate calls (same number and type of call) only appear once on the list.

To view a call log from the main menu:

Note:

When displaying a Call Log, press to be immediately connected.

1. Press 2 ABC for Calls.
   Press the associated digit key to select an option:
   - Press 1 for Outgoing calls.
   - Press 2 ABC for Incoming calls.
   - Press 3 DEF for Missed calls.
2. When the list of calls displays, press the scroll keys to scan the logs. The time / date stamp displays for each log. If there is an Internal Phone Book match, the name displays. If there is not an Internal Phone Book match, only the phone number displays.
3. When a log is highlighted you can press:
   - TALK to be connected to that party.
   - OK to review information available on that call (name and phone number (if available) and time/date stamp). When you are viewing this information you can press MENU for more options (talk, save to your phone book, or prepend the number - see page xx for Call Log options).

4. Press CLR to exit the Call Logs list and return to the previous screen.

Call Log Options

For additional information and options for a particular call, highlight a call log entry and press OK. This feature gives you the option of selecting:

- Talk to dial the phone number.
- Show Entry to display the Internal Phone Book entry (if the sender's phone number is in your Phone Book). If the phone number is not in your Internal Phone Book, the Save option is displayed.
- Save Phone # to save the sender's phone number if it is not already in your Internal Phone Book (if applicable). See "Saving a Phone Number from a Call Log" on page xx.)
- Prepend to add numbers to the beginning of the phone number. (See "Prepending a Phone Number from a Call Log" on page xx.)

Making a Call from a Call Log

To place a call from a call log is easy:

▲ Press TALK when viewing the call log.

Prepending a Phone Number from a Call Log

If you need to make a call from a call log and you happen to be outside your local area code, you can add the appropriate prefix by following these steps:

1. From the main menu press 2 ABC for Calls.
   - Press the associated digit key to select an option:
   - Press 1 for Outgoing calls.
   - Press 2 ABC for Incoming calls.
   - Press 3 DEF for Missed calls.
2. When the list of calls displays, press the scroll keys to highlight the desired log.
3. Press MENU to view options.

Note:

Calls labeled Fax can only be dialed through a personal computer.

4. Press 3 DEF for Prepend.
5. Enter the appropriate digits to prepend and press TALK to be connected.

Saving a Phone Number from a Call Log

Note:

You cannot save phone numbers already in your Internal Phone Book or calls identified as No ID or Restricted.

Note:

Phone numbers labeled Fax can only be dialed through a personal computer.

Your Sprint PCS Phone can store up to 229 Internal Phone Book entries. Internal Phone Book entries can store up to a total of 6 phone numbers and the entry's name can contain 12 characters.

To save a phone number from the Call Log:

1. From the main menu press 2 ABC for Calls. Press the associated digit key to select an option:
   - Press 1 for Outgoing calls.
   - Press 2 ABC for Incoming calls.
   - Press 3 DEF for Missed calls.
2. When the list of calls displays, press the scroll keys to highlight the desired log.
3. Press MENU to view options.
4. Press 2 ABC for Save.
5. Follow the prompts to complete storing the number into your Internal Phone Book.

Erasing Call Logs

You can erase any of the three lists (Outgoing, Incoming or Missed calls) or you can easily erase all three lists at once. Here's how to do it:

1. From the main menu press 2 ABC for Call Logs.
2. Press 4 GHI for Erase History.
3. Press the associated digit key to select an option:

- Press 1 for Outgoing calls.
- Press 2 ABC for Incoming calls.
- Press 3 DEF for Missed calls.
- Press 4 GHI for All Calls.

4. Press OK to erase or press CLR to cancel the operation and return to the previous screen.

Reviewing Airtime

Your phone records (or logs) and approximation of the amount of airtime or talk time used. There are two airtime measurements.

- A "Total" measurement that lists the number of calls made to or from your phone, and the total time in hours and minutes for these calls. This airtime measurement can easily be erased by you at any time and therefore is convenient for estimating your usage on a daily, weekly, monthly, etc. basis. This feature is not intended for billing purposes.
- A "Lifetime" measurement that shows (in hours and minutes) the total time spent on all calls (incoming and outgoing) since your phone was placed into service. This airtime log is kept for historical and maintenance reasons and cannot be erased. This feature is not intended for billing purposes.

The timer rounds each call up to the next minute.

For airtime measurement options:

1. From the main menu press 2 ABC for Calls.
2. Press 5 JKL for Air Time.

3. The following four options are available:

- Press 1 for Last Call. The screen displays the date and time of the last call along with the number of minutes and seconds.
- Press 2 ABC for Total. The screen displays the total number of calls and the estimated total airtime for all calls since you set this total to zero (by using the "Erase Total" option). Press CLR to return to the previous screen.
- Press 3 DEF for Erase Total. Press OK to erase the "Total" airtime measurement, or press CLR to cancel the operation and return to the previous screen.
- Press 4 GHI for LifeTime. The screen displays the estimated total airtime (in hours and minutes) of every phone call that has been made to or from your phone.

Keeping Track of Your Calls while Your Phone is in-use

You can view the incoming, outgoing and missed calls logs on your phone while you are on a call. Additionally, you can erase the call log history and display and erase air time information while your phone is in use. Here's how to do it:

1. From the main menu press 2 ABC for Calls. The following options are available:

- 1: Outgoing
- 2: Incoming
- 3: Missed
- 4: Erase History
- 5: Air Time

10

Using your Internal Phone Book

In this Section

- Adding New Internal Phone Book Entries
- Finding Internal Phone Book Entries
- Internal Phone Book Entry Options
- Adding Call Alarms from the Internal Phone Book
- Selecting Ringer Types
- Dialing Sprint PCS Services

Now you know the basics and you've learned the advanced features that can help make it easier to stay in touch with people and information. This section helps you make the most of your contacts and use your time more effectively when you're trying to connect with the important people in your life.

Adding a New Internal Phone Book Entry

Your Sprint PCS Phone can store up to 229 Internal Phone Book entries. Each Phone Book name entry can have up to a total of six phone numbers associated with it. Phone Book entry's name can contain 12 characters.

1. From the main menu press 3 DEF for Phone Book.
2. Press 2 ABC for Add New Entry.
3. The screen prompts for the phone number. (You can enter up to 32 digits.) Press the digit keys to enter the phone number. The number displays from left to right.
4. Press MENU to enter a hard or two second pause or press OK for the Next Step.
5. Select a Label for your new entry, your choices are:

- 1 for Home, 2 ABC for Work, 3 DEF for Mobile, 4 GHI for Pager, 5 JKL for Fax, or 6 MNO for No Label

The phone prompts for a name.

6. Press OK to select <Add New Name> and create a new Internal Phone Book entry.
7. Enter a name (up to 12-characters) at the screen prompt using the keypad and press OK (the text entry mode default is Alpha, initial capitals). For information on text entry, see "Entering text, numbers or symbols" on page xx.
8. To accept the displayed location, press OK, or to select another available location press:

- the navigation keys to scroll to the desired location and press OK or
- digit keys to go to the desired location and press OK.

9. The entry displays allowing you to check the information for accuracy. Press MENU to change the information or set other options. See Editing an Internal Phone Book Entry on page xx.

Finding Internal Phone Book Entries

You can locate and view your Internal Phone Book entries three different ways:

Viewing Stored Entries in One Step

You can view your entire Internal Phone Book in alphabetical order of the names (a-z)by pressing CLR.

You can also set the TALK key to allow you to view your entire Internal Phone Book in alphabetical order of the names (a-z). To set this feature to work; see Setting the Talk Key on page xx.

1. Press the CLR key to access the Internal Phone Book alphabetically. When "NAME" displays, you can enter the first letter of the name you are searching for and the matching entries display. You may continue to enter additional entries to further refine the search.
2. Scrolling is easy. Press any of the following keys to scroll through your Internal Phone Book: , , , or the volume keys Press MENU to scroll by page.

- You can place a call by highlighting the name that you want to call and then pressing the TALK key.

Finding stored entries by name

1. From the main menu press 3 DEF for Phone Book.
2. Press 1 for Find Name.

- Stored names display in an alphabetical list.

3. Using the alphanumeric keys, enter the first character of the name that you want to find in your Internal Phone Book. The phone searches for and displays the first Internal Phone Book entry beginning with the character you entered. You can enter the second character of the name and your phone will display name entries beginning with the two characters you entered. You can also scroll through Internal Phone Book entries using the navigation keys.

4. When you find your desired entry, make sure it is highlighted, and then press TALK to place a call, or OK if you want to edit the entry.

Finding stored entries by location

1. From the main menu press 3 DEF for Phone Book.
2. Press 4 GHI for Find Entry.
3. Press the corresponding digit keys to enter and display your desired location or use the navigation keys to locate an entry.
4. When you find your desired entry, make sure it is highlighted, and then press TALK to place a call, or OK if you want to edit the entry.

Adding a new phone number to an existing entry

Remember you can have up to six numbers under one person's name (or entry) in the Internal Phone Book.

1. From the main menu press 3 DEF for Phone Book.
2. Press 2 ABC for Add New Entry.
3. The screen prompts for the phone number. (You can enter up to 32 digits.) Press the digit keys to enter the phone number. The number displays from left to right.
4. Press MENU to enter a hard or two second pause or press OK for the next prompt.
5. Select a Label for your new entry, your choices are:

- Press 1 for Home
- Press 2 ABC for Work
- Press 3 DEF for Mobile
- Press 4 GHI for Pager
- Press 5 JKL for Fax
- Press 6 MNO for No Label

6. At the "Name?" prompt, use the navigation keys to scroll to the Internal Phone Book entry that you are adding a number to. Press OK to Store the new phone number.

7. If the desired memory location already contains an entry, the phone displays a message asking if you want to replace the current entry. To replace the entry, press OK. To return to the previous screen and select another location, press CLR. You can only use each label one time for each stored name (for example, you can only have one number labeled Work for a name entry). Stored phone numbers must be unique. You can only store a particular phone number one time anywhere in your phone book.

Shortcuts for storing phone numbers

You can store a phone number quickly by entering the number, and then pressing OK. Then follow the prompts to designate the label, name and entry. You can quickly save a number after an incoming or outgoing call. See below for "Storing phone numbers at the end of a call."

My Sprint PCS Phone Number

To display the phone number of your Sprint PCS Phone:

1. From the main menu, press 3 DEF for Phone Book.
2. Press 3 DEF for My Phone#.
3. Press END to return to Standby mode.

Storing phone numbers at the end of a call

To store a phone number after ending a call:

Remember, if the call was incoming, and Caller ID information was not available, then the store option will not be available.

1. Once you have pressed END to end your call, the screen displays the call time (length of call), phone number of the party (if available), and the "OK: Save" option.
2. To store the phone number, press OK. The procedure at this point is the same as "To store phone numbers and names:" on page xx.

Prepend a phone number

Your Sprint PCS Phone includes a Prepend feature. This feature lets you add a temporary prefix to telephone numbers stored in the Internal Phone Book (for example, to temporarily disable call waiting).

To Prepend a stored phone number:

1. From the main menu press 3 DEF for Phone Book.
2. Press 1 to search stored entries by name or press 4 GHI to search by number.
3. Highlight your desired entry and press MENU to display options.
4. Press 4 GHI to Prepend the number.
5. The screen displays "Prepending". Use the digit keys to enter the calling prefix and then press TALK to place the call.

Adding a Name Ringer

You can associate one of 13 different ringers (four melodies and nine tones) to any number stored in your Internal Phone Book. When you receive an incoming call from a number matching an entry in your Internal Phone Book, your phone will sound the associated ringer to announce the call.

If the Caller ID information is not available for an incoming call, the Name Ringer option will not work.

To add a Name Ringer to an Internal Phone Book entry:

1. From the main menu press 3 DEF for Phone Book.
2. Press 1 to search stored entries by name or press 4 GHI to search by number.
3. Highlight your desired entry and press MENU to display options.
4. Press 6 MNO to add a Name Ringer.
5. Your phone displays the current ringer setting. Use the scroll key to listen to available ringers and melodies.
6. Press OK to Save your ringer selection.

Editing Internal Phone Book numbers

Once you have stored a number in the Internal Phone Book you can easily change it. To change an Internal Phone Book entry:

1. From Standby mode, find the Internal Phone Book entry that you want to change.
2. Highlight your desired entry and press the OK key to display the name and number.
3. Press MENU to display options.
4. Press 3 DEF for Edit. Your edit options display. If the number has been designated as Secret you are prompted to enter the Lock Code.

- Press 1 to change the phone number.
- Press 2 ABC to change the name.
- Press 3 DEF to move the number to a different location.
- Press 4 GHI to make the number secret.
- Press 5 JKL to Set Speed Dial number.

5. Press OK to save your changes. Press END to return to Standby mode.

Secret Internal Phone Book numbers

Your Sprint PCS Phone allows you to hide a confidential number so that only a person with your phone's lock code can view the number and name. To make a number secret, see the previous paragraph. When you have made the number secret, the phone will not allow anyone to view information on the number unless they enter your four-digit lock code.

Erasing Internal Phone Book entries

To erase an entry in the Internal Phone Book:

1. From Standby mode, find the Internal Phone Book entry that you want to change.
2. Highlight your desired entry and press the OK key to display the name and number.
3. Press the MENU key for Options.

Note:

When erasing Internal Phone Book entries all phone numbers associated with the entry are deleted.

4. Press 5 JKL for Erase.
5. Press OK to Erase or CLR to Cancel. Your phone will prompt you for confirmation. Press OK to confirm and erase the Internal Phone Book entry and return to Standby mode, or press CLR to cancel the erase and return to the Internal Phone Book options menu.

The "Erased" notification displays along with the name, number, and location of the erased entry.

Erasing the Internal Phone Book

See "Erasing Your Internal Phone Book" on page xx.

Set Speed Dial

For each name entered in the Internal Phone Book, one of the programmed numbers should be designated as the speed dial number.

1. From Standby mode, find the Internal Phone Book entry that you want to change.
2. Highlight the desired entry and press the OK key to display the name and number.
3. Press the MENU key for Options.
4. Press 3 DEF for Edit.
5. Press 5 JKL for Set Speed Dial.
6. Press OK. The message "Speed Dial Saved" displays. To cancel press CLR to return to the previous menu.

- To dial numbers using the "Speed Dial" functions please refer to "Dialing numbers from your Internal Phone Book" on page xx.

Dialing Numbers from Your Internal Phone Book

Dialing numbers from your Internal Phone Book is quick and easy. There are six methods explained below.

- Scroll to the number: When viewing the Internal Phone Book list, scroll until you find the desired person or number, and then press the TALK key.

- One-Touch Dialing: From Standby mode, press and hold the associated digit key for the location (applies to memory locations 1 through 9).
- Two-Touch Dialing: From Standby mode, press and release the first associated digit key, and then press and hold the second digit key (applies to memory locations 10 through 99).
- Three-Touch Dialing: From Standby mode, press and release the first associated digit key, then press and release the second digit key, then press and hold the third digit key (applies to memory locations 100 through 229).
- Four Digit Dialing: From Standby mode, enter four consecutive digits of a stored number (for example, the last four digits of a number) and press TALK. If more than one entry exists, scroll to your desired entry and then press TALK.
- Speed Dialing: From Standby mode, enter the number of the memory location, and press TALK.

Dialing Sprint PCS Services

Phone numbers for frequently used services are pre-programmed into your phone. The pre-programmed numbers are:

- * 4 GHI for Account Info
- * 2 ABC for Sprint PCS Customer Care.
- 4 GHI 1 1 for Directory Assistance.
- * 7 PQRS 2 ABC 9 WXYZ for Prepaid Calling Service.
- # 7 PQRS 6 MNO 2 ABC 3 DEF for Roadside Assistance.

To access these services:

1. From the main menu press 3 DEF for Phone Book.
2. Press 5 JKL for Services.
3. Press the associated digit key to select an option:

- For Account Info, press 1 and TALK to connect.
- For Customer Care, press 2 ABC and TALK to connect.

- For Directory Assistance, press 3 DEF and TALK to connect.
- For Prepaid Calling Services, press 4 GHI and TALK to connect.
- For Roadside Assistance, press 5 JKL and TALK to connect.

Using your Internal Phone Book while Your Phone is In-Use

Your phone's Internal Phone Book functions are available while you are on a call and your phone is In-Use. To access your Internal Phone Book while your phone is In-Use:

1. Press the MENU key for In-Use menu options.
2. Press 3 DEF for Phone Book. Select from the following functions:

- 1: Find Name
- 2: Add New Entry
- 3: My Phone #
- 4: Find Entry
- 5: Services

Whether you are on a call or not, the Internal Phone Book features work exactly as described previously in this section.

11

Changing your Phone's Settings

In this Section

- Changing the Greeting
- Changing the Contrast and Backlight Setting
- Setting the Language of the Display
- Setting the Ringer Volume
- Setting the Ringer Type
- Data/Fax Mode
- Setting the TALK key

This section describes how you can change your phone's settings to best suit your requirements. Take a few moments to review these options and adjust or add settings that are right for you.

Backlight Control

You have several options for setting how the backlight operates. When the phone is closed, the backlight remains off, thus conserving battery power. When the phone is open, the length of time that the backlight remains on can be set.

Remember that backlight use drains your battery faster. To select backlight options:

1. From the main menu press 9WXYZ for Setup / Tool.
2. Press 1 for Display.
3. Press 1 for Backlight.
4. Press the scroll keys to scan menu options: Flip Open, 8 Seconds, 30 Seconds (after last keypress), or Off.
5. When the desired option displays, press OK to Save the setting.

Personal Greeting

Your phone comes with a greeting that reads "Sprint PCS". This greeting displays in Standby mode. You can personalize this greeting with anything you want up to 12 characters. Here's how to do it:

1. From the main menu press 9WXYZ for Setup / Tool.
2. Press 1 for Display.
3. Press 2ABC for Greeting. Your current greeting displays.
4. Enter a new personal greeting by pressing the alphanumeric keys on the keypad (press CLR to clear the default greeting, "Sprint PCS"). When entering your greeting, the phone defaults to alpha text (lower case) input mode. Press the MENU key for more text entry options.
5. Press OK to Save your personal greeting.

Contrast Control

The display contrast of your phone can be easily changed. To change the setting or view the current setting:

1. From the main menu press 9WXYZ for Setup / Tool.
2. Press 2ABC for Display.

3. Press 3 DEF for Contrast.
4. Press the scroll keys to scan menu options: Highest, High, Med, Low and Lowest.
5. When the desired option displays, press OK to Save the setting.

Setting the language of your phone

Your Sprint PCS Phone can display all menus and messages in either Spanish or English; all verbal prompts will also be spoken by the phone in the selected language. It's quick, easy and very convenient for bilingual families or friends. Here's how to do it:

1. From the main menu press 9 WXYZ for Setup / Tool.
2. Press 8 TUV for Language.
3. Press the scroll keys to select English or Spanish.
4. When the desired option displays, press OK to Save the setting. The change is immediate and affects all menus, screens and verbal prompts.

Ringer Options

Your Sprint PCS Phone provides a variety of ringer options in the Sounds menu. These options allow you to customize your ringer type and ringer volume settings so that you can easily recognize when a certain type of call is coming in.

Ringer Type Setting for Voice Calls

This option enables you to set a unique ringer type for incoming voice calls. Also, incoming voice calls that have Caller ID can be distinguished from those that do not by selecting different ringer types. In addition, you can set distinctive ring types for individual names stored in your Internal Phone Book. For more information on this see "Adding a Name Ringer" on page 76. To set the ringer type for voice calls:

1. From the main menu press 9 WXYZ for Setup / Tool.
2. Press 1 for Sounds.
3. Press 2 ABC for Ringer Type.

Tip:

You can use the volume control keys on the side of the phone to adjust the ringer volume in Standby mode or the other caller's voice volume during a call.

Note:

When the phone is in Vibrate Mode and attached to an accessory (Desktop Charger, Hands-Free Car Kit, etc.), it uses the Standard ringer type to alert you of incoming calls, alarms or messages.

4. Press 1 for Voice Calls.
5. Press 1 to set the ringer type for calls that have Caller ID info or 2 ABC for calls without Caller ID info.
6. Press the scroll keys to scan nine ringer types and four melody tones. Each tone sounds as you scroll the options.
7. When the desired ringer type sounds, press OK to Save the setting.

Ringer Volume Setting for Voice, Data, and Fax Calls

There are two ways to set the ringer volume for voice and data/fax calls:

- From Standby mode, press the volume keys until the desired volume is reached. The options are High & Vib, High, Med, Low, Vibrate, 1-Beep or Off.
- From the main menu:

1. Press 9 WXYZ for Setup / Tool.
2. Press 1 for Sounds.
3. Press 1 for Ringer Volume.
4. Press 1 for Calls.
5. Press the scroll keys to select High & Vib, High, Med, Low, Vibrate, 1-Beep or Off.
6. When the desired ringer volume setting displays, press OK to Save the setting.

When ringer volume is set to "Off", all sounds are muted including message notification tones. This is helpful in quiet environments like a business meeting.

Ringer Type Setting for Message Notifications

This option enables you to set a unique ringer type for incoming message calls. This means you can have distinct ringer types for Sprint PCS Voicemail notifications, numeric pages and Sprint PCS Wireless Web Alerts. To set the ringer type for voice calls:

1. From the main menu press 9 WXYZ for Setup / Tool.

2. Press 1 for Sounds.
3. Press 2 ABC for Ringer Type.
4. Press 2 ABC for Messages.
5. Press 1 for Voicemail, 2 ABC for Page, 3 DEF for Text or 4 GHI for Web Alerts.
6. Press the scroll keys to scan nine ring types and four melody tones. Each tone sounds as you scan the options.
7. When the desired ring type sounds, press OK to Save the setting.

Ringer Volume Setting for Message Notifications

This feature enables you to select a unique ringer volume for incoming message calls. This volume setting applies to incoming Sprint PCS Voicemail notifications, numeric pages and Sprint PCS Wireless Web Messaging. To set the ringer volume for message notifications:

1. From the main menu press 9 WXYZ for Setup / Tool.
2. Press 1 for Sounds.
3. Press 1 for Ringer Volume.
4. Press for Messages.
5. Press the scroll keys to select High, Med, Low, Vibrate, 1-Beep or Off.
6. When the desired volume setting displays, press OK to Save the setting.

Ringer Type Setting for Your Alarm

This option enables you to set a unique ringer type for your alarm. To set the ringer type for the alarm:

1. From the main menu press 9 WXYZ for Setup / Tool.
2. Press 1 for Sounds.
3. Press 2 ABC for Ringer Type.
4. Press 3 DEF for Alarm.

5. Press the scroll keys to scan nine ring types and four melody tones. Each tone sounds as you scan the options.
6. When the desired ring type sounds, press OK to Save the setting.

Ringer Volume Setting for Your Alarm

This feature enables you to select a unique ringer volume for your alarm.

To set the ringer volume for your alarm:

1. From the main menu press 9WXYZ for Setup / Tool.
2. Press 1 for Sounds.
3. Press 1 for Ringer Volume.
4. Press 3DEF for Alarm.
5. Press the scroll keys to select High, Med, Low, or Off.
6. When the desired volume setting displays, press OK to Save the setting.

Ringer Type Setting for Data/Fax Calls

This option enables you to set a unique ringer type for fax and data calls. To set the ringer type for data and fax calls:

1. From the main menu press 9WXYZ for Setup / Tool.
2. Press 1 for Sounds.
3. Press 2ABC for Ringer Type.
4. Press 4GHI for Data/Fax In.
5. Press the scroll keys to scan nine ring types and four melody tones. Each tone sounds as you scan the options.
6. When the desired ringer type sounds, press OK to Save the setting.

Ringer Type Setting for Roaming Calls

This option enables you to select a distinctive ringer type for incoming roaming calls (this feature is on by default).

To set a distinctive ringer for incoming roaming calls:

1. From the main menu press 9WXYZ for Setup / Tool.

2. Press 1 for Sounds.
3. Press 6 MNO for Roam Ringer.
4. Press the scroll keys to choose Distinctive or Normal.
5. When the desired ringer type displays, press OK to Save the setting.

Data/Fax Mode

The Sprint PCS Wireless Web™ Connection Kit (purchased separately) lets you link your laptop PC to your Sprint PCS Phone so you can send and receive data and faxes.

Note:

The phone must be on a digital network to send or receive data and faxes.

Receiving a Fax or Data Call

To receive a fax or data call with your phone:

1. Ensure that your Sprint PCS Phone is connected to your computing device and is powered on.
2. From the main menu press 9 WXYZ for Setup/Tool.
3. Press 3 DEF for Data/Fax In.
4. Use the scroll keys to select "Incoming Fax Only" or "Incoming Data Only".
5. Press OK to save the setting. The screen displays "No incoming voice calls can be received". Your phone then returns to Standby mode and displays "* Fax Only *" or "* Data Only *" above the greeting.

Once you have set your phone's mode to "Incoming Fax Only" or "Incoming Data Only", you cannot receive regular voice calls until you change back to "Voice". See "Changing Your Phone Back to Voice Calling" on page 88.

6. In the Fax program on your PC, setup the Answer mode. Click on "Receive" and select one of the following:

- Automatic Receive (recommended)
- Manual Receive

Your phone is now ready to receive an incoming fax or data call.

Note:

When your phone is in Data/Fax mode, you cannot make or receive voice calls.

Note:

The phone always powers up in Standby mode, even if it was powered down in Data/Fax mode. The phone also returns to Standby mode if the data cable is disconnected.

Changing Your Phone Back to Voice Calling

1. From the main menu press 9 WXYZ for Setup/Tool.
2. Press 3 DEF for Data/Fax In.
3. Use the scroll keys to select "Voice Call Only".
4. Press OK to Save the setting. The screen displays "No incoming data/fax calls can be received". Your phone then returns to Standby mode.

Ending a call

Some of the normal ways to end a call, like closing the phone will end a Sprint PCS Wireless Web call. Always close the connection through the application on your computer. Your phone will return to Standby mode. Disconnecting the data cable or turning off your phone will also end a wireless web call, but may disrupt your computer.

Setting the TALK Key One-Touch Access

The TALK key is set at the factory to access your outgoing call log when pressed from Standby mode. This "one-touch access" can instead be set for the Internal Phone Book if you prefer. It's easy to set.

1. From the main menu press 9 WXYZ for Setup/Tool.
2. Press 0 for Talk Key.
3. Use the scroll keys to select "PhoneBook" or "Calls".
4. Press OK to Save the setting or CLR to return to the previous screen.

12

Setting your Phone's Security

In this Section

- Accessing the Security Menu
- Locking your Phone
- Unlocking your Phone
- Dialing in Lock Mode00
- Using Special Numbers
- Resetting Your Phone
- Erasing Your Internal Phone Book

By using the security setting on your Sprint PCS Phone™, you receive peace of mind without sacrificing flexibility. With several options available, you can customize your phone to meet your personal needs.

Tip:

If you can't recall your lock code, try using the last four digits of either your Social Security number or Sprint PCS Phone Number or try 0000. If none of these work, call Sprint PCS Customer Care at 1-888-211-4PCS (4727).

Accessing the Security Menu

You must enter your lock code to view the Security menu. If you forget your lock code, try using the last four digits of your Social Security number, the last four digits of your Sprint PCS Phone Number or 0000.

To access the Security menu:

1. From the main menu, press 9WXYZ for Setup / Tool.
2. Press 4GHI for Security.
3. Enter your lock code.

The following options are available:

- 1. Lock Phone
- 2. Change Lock
- 3. Special #
- 4. ErasePhoneBook
- 5. Reset Phone

Locking your Phone

When your phone is locked, you can only receive incoming calls or make calls to 911, Sprint PCS Customer Care or special numbers.

You can lock the phone manually during use, or set the phone to lock automatically when it is turned on.

To lock your phone:

1. From the main menu, press 9WXYZ for Setup / Tool.
2. Press 4GHI for Security and enter your lock code.
3. Highlight Lock Phone and press OK.
4. Press the scroll keys to select an option:

- Unlocked: The phone remains unlocked.
- Lock Now: The phone locks immediately and stays locked until the lock code is entered.
- On Power-Up: The phone locks automatically the next time your phone is powered on and stays locked until the lock code is entered.

Unlocking your Phone

▲ To unlock your phone press MENU. Enter your lock code.

Changing the Lock Code

You can enter a personal lock code and later change the lock code as often as you like. To enter a new lock code:

1. From the main menu, press 9WXYZ for Setup / Tool.
2. Press 4GHI for Security and enter your lock code.
3. Highlight Change Lock and press OK. The current lock code displays.
4. Enter a new, four-digit lock code by pressing the digit keys.
5. Press OK to Save the new lock code or END to exit.

Your phone does not allow viewing of the lock code unless you know the lock code (this is for obvious security reasons). So, if you change the lock code, be sure to write down the new code and keep it for your reference.

Dialing in Lock mode

You can place calls to emergency and special numbers in Lock mode. To place normal outgoing calls in Lock mode, enter the lock code to unlock the phone, and then dial the phone number.

To place an outgoing call in Lock mode:

- To call an emergency number, special number, or Sprint PCS Customer, enter the number and then press TALK.
- To place normal outgoing calls, press MENU to display the lock code screen, and then enter the lock code. When the Standby screen displays, enter the phone number, and then press TALK.

Special numbers

Your Sprint PCS Phone provides the option of storing three special numbers. Each special number can be up to ten digits long.

All three special numbers can be manually dialed at any time even when your phone is locked. This can be a useful

feature for controlling what numbers can be dialed from your phone.

Storing special numbers

To store special numbers:

1. From the main menu, press 9 WXYZ for Setup / Tool.
2. Press 4 GHI for Security and enter your lock code.
3. Press 3 DEF for Special #.
4. Press 1 , 2 ABC or 3 DEF to select a location for the special number.
5. Enter the special number by pressing the digit keys. Special numbers can be up to ten digits long.
6. Press OK to Save the number in the selected location.

Dialing special numbers in Lock mode

To dial special numbers in Lock mode:

1. Enter the special number by dialing it as you normally would using the digit keys.
2. Press TALK to place the call.

Resetting your phone

Resetting the phone returns all setup options to the factory default settings. All of your important personal data (Internal Phone Book, Voice Dial recordings, Voice Memos, Messages, Call Logs and Calendar) are not affected by resetting your phone. To reset the phone:

1. From the main menu, press 9 WXYZ for Setup / Tool.
2. Press 4 GHI for Security and enter your lock code.
3. Press 5 JKL for Reset Phone. A confirmation displays explaining that you will reset the phone to factory defaults.
4. Press OK to reset the phone or press CLR to cancel the operation.
5. The phone reboots (turns itself off and back on), restores the default settings, erases your messages and then returns to Standby mode.

Erasing Your Internal Phone Book

You can erase all the numbers stored in your Internal Phone Book. This is useful if you want to give your phone to a friend or family member. Here's how to do it:

1. From the main menu, press 9WXYZ for Setup / Tool.
2. Press 4GHI for Security and enter your lock code.
3. Press 4GHI for Erase Phone Book.
4. Press OK to erase the Internal Phone Book or press CLR to cancel the operation.
5. "Erasing Phone Book" displays first and when the operation is complete "Phone Book Erased" displays. The phone then returns to Standby mode.

13

Personal Information Management (Calendar)

In this Section

- Viewing the Calendar
- Adding an Event to the Calendar
- Adding To Do Items
- Using the Countdown Timers
- Using the Alarm Clock
- Using the World Clock
- Using the Calculator
- Using Your Calendar while on a Call

Your Sprint PCS Phone™ has been equipped with several personal information management features to help you manage your busy life-style. These features turn your phone into a time management planner that helps you keep up with your contacts, schedules and commitments. It takes productivity to a whole new level. You can even use these convenient features while you are on a call.

Calendar

Press 7 PQRS from the main menu to access your Calendar. Press one of the following digit keys to access the options or highlight the option you want and press OK to access that option. Calendar has the following options:

- 1: Today
- 2: Month View
- 3: Jump To Date
- 4: To Do List
- 5: Countdown
- 6: Alarm Clock
- 7: World Clock

Tip:

Use the volume keys to scroll by month through the calendar or press the key to scroll by week.

Today

You can schedule up to nine events for the current day indicating each event's start and end time. You can even have your phone's Calendar alert you before an event is to start. Events scheduled for future dates will automatically appear on your Today events schedule on that day.

Here's how to enter an event:

1. From the main menu press 7 PQRS for Calendar.
2. Press 1 for Today.
3. Enter your event information, you can enter up to 32 characters. For more information on Text and Symbol Entry refer to "Entering text, numbers or symbols" on page xx. The default entry mode is T9 word.
4. Press OK to accept your entry and go to the Next Step.
5. Enter the start time and Date, and press OK.
6. Enter the end time and Date, and press OK.
7. Set an alarm to notify you of your event by scrolling through the Alarm options and pressing OK to select your choice. Your Alarm options are: 10 minutes Before, On time, No Alarm, 1 hour Before, and 30 minutes Before.

8. Set an alarm to notify you of your event by scrolling through the Alarm options and pressing OK to select your choice. Your Alarm options are: 10 minutes Before, On time, No Alarm, 1 hour Before, and 30 minutes Before.

To view an event:

1. From the main menu press 7 PQRS for Calendar.
2. Press 1 for Today.
3. Use the navigation keys to display all of an event's information. If you have more than one event, use the navigation keys to display more events.

To Add, Edit or Erase Events:

1. From the main menu press 7 PQRS for Calendar.
2. Press 1 for Today. If you have more than one event scheduled for today, press the navigation key to scroll through your events.
3. To add a New Event for today press MENU 1.
4. To Edit an Event, highlight the Event to be edited and press MENU 2 ABC, then follow the prompts.
5. To Erase an Event, highlight the Event you want to erase and press MENU 3 DEF.
6. Press MENU 4 GHI to Exit the Options menu.

Month View

Month View allows you to view a calendar of the current month, or a past or future month. In Month View, the current date is highlighted on the calendar. Days with scheduled events are underlined. When in Month View, the scroll keys work like this:

- The right/left keys move right or left one day.
- The navigation key scrolls down the Calendar by one week.
- To display the next or previous month, press (the volume keys) on the side of the phone.

Access Month View as follows:

1. From the main menu press 7PQRS for Calendar.
2. Press 2ABC for Month View.

- Remember, the current date is highlighted.
- Use the navigation keys to select the month and day.
- Days with scheduled events are underlined.

To view, add, edit or erase an event on your Calendar:

1. From the main menu press 7PQRS for Calendar.
2. Press 2ABC for Month View.

- The current date is highlighted.
- Use the navigation keys to select the month and day.

3. Press OK to display events for the selected day. If no events are scheduled for your selected day (the date is not underlined), your phone will automatically go to the New Event function.

- If more than one event is scheduled for Today, use the navigation keys to view all events for the day you selected.

4. Press OK or CLR to return to the Calendar.
5. Press MENU to display the Options menu. Choose what you want to do: New Event, Edit Event, Erase Event and Exit. All of these options work as described above.

Jump To Date

Jump To Date allows you to specify the calendar date you want to view. Once at your desired date you can enter, edit and erase events in your calendar. To use Jump To Date:

1. From the main menu press 7PQRS for Calendar.
2. Press 3DEF for Jump to Date.
3. Enter the Date using the digit keys.
4. Press OK to display the Calendar. The date entered above is highlighted.

You can add, edit or erase events by pressing MENU as described earlier.

To Do List

Your To Do list can help you keep track of and prioritize the things you need to do. You can enter and prioritize up to 20 items on your To Do List. Here's how to create a To Do List:

1. From the main menu press 7 PQRS for Calendar.
2. Press 4 GHI for To Do List.
3. Enter the item you need to do. To input text and characters refer to "Entering Text, Numbers or Symbols" on page xx.
4. Press OK.
5. Enter the time and date and press OK.
6. Using the navigation keys, set the priority for a To Do List item. Your choices are High and Low.
7. Press OK to save your prioritized To Do List item.

To view, edit, add or erase To Do List items

1. From the main menu press 7 PQRS for Calendar.
2. Press 4 GHI for To Do List.
3. Using the navigation keys find the To Do List item you want to change and press OK.
4. Press the digit key corresponding to the action that you want. Your choices are New Item, Edit Item, Erase Item and Exit.
5. Continue to add a new item, edit an existing item or immediately erase an existing item by following the prompts.

Count Down

Have you ever wanted to know how much time it takes you to do something, or how many minutes, hours, days and months until a special event? The Count Down option can help you answer these questions. You can create up to 5 Count Down timers using the Count Down feature in Calendar. To enter a Count Down:

1. From the main menu press 7 PQRS for Calendar.
2. Press 5 JKL for Countdown.

3. Press MENU to display options.
4. Press 1 to enter a New Item.
5. Enter the name of your new Countdown. To input text and characters refer to "Entering Text, Numbers or Symbols" on page xx. Press when complete. The default entry mode is T9 word.
6. Enter the date and time that you want to Countdown from. For example, if today's date is November 23, 2000 and you want to know how many months, days and hours are left before 7:00PM February 14, 2001, enter the time 07:00PM and the date 02/14/2001.

- Press the volume keys to toggle between AM and PM or, press 2 ABC for AM or 7 PQRS for PM.
- Countdowns can be entered for dates between the years 1980 and 2099.

7. Press OK to save your new Countdown item.

To view, add, edit or erase a Countdown:

1. From the main menu press 7 PQRS for Calendar.
2. Press 5 JKL for Countdown.

- Countdown timers display in order of least amount of time passed since the Countdown was started, and least amount of time remaining until the specified date.

3. Press MENU to display available options. Press the key corresponding to the option you want or highlight the option and press OK. Your choices and their corresponding keys are:

- 1 New Item
- 2 ABC Edit Item
- 3 DEF Erase Item (immediately erases the selected Countdown item).
- 4 GHI Exit (return to the Countdown display screen).

4. Follow the prompts to complete adding or editing a Countdown.

Alarm Clock

Your Sprint PCS Phone has an alarm clock inside of it with three separate alarms. Each alarm can be set to go off one time or to go off daily at a time that you have programmed. Once you set an alarm, it is easy to change the alarm time or to turn it off. To set the Alarm:

1. From the main menu press 7 PQRS for Calendar.
2. Press 6 MNO for Alarm Clock.
3. Select the Alarm you want to set by pressing 1, 2 ABC or 3 DEF.
4. Choose "Daily" or "No Repeat" for the alarm.
5. Enter the date and time for the alarm. Use the volume key on the side of the phone to select AM or PM, or press 2 ABC for AM or 7 PQRS for PM. Note that no date setting is available for a Daily alarm.
6. Press OK to save the alarm setting. Your phone returns to the Alarm menu showing the date and time of each alarm that is set.

To edit or erase a programmed Alarm:

1. From the main menu press 7 PQRS for Calendar.
2. Press 6 MNO for Alarm Clock.
3. Select the Alarm you want to set by pressing 1, 2 ABC or 3 DEF.
4. In the Options screen, press 1 for Edit or 2 ABC for Erase. If you choose Erase, the alarm is immediately erased and you are returned to the Alarm menu. You can also choose 3 DEF (Exit) if you change your mind.
5. If you choose Edit, then choose "Daily" or "No Repeat" for the alarm, and enter the new date and time for the alarm. Use the volume keys on the side of the phone to select AM or PM or press 2 ABC for AM or 7 PQRS for PM.
6. Press OK to save the new alarm setting. Your phone returns to the Alarm menu showing the date and time of each alarm that is set.

You can set the type of alarm ringer that sounds, see "Ringer Type Setting for Your Alarm" on page xx.

World Clock

Have you ever wanted to call a friend in another part of the world but wondered what time of the day it is there? To know what time it is before you call, use the World Clock function of the Calendar. World Clock tells you what time it is in twenty-four different time zones around the world along with one or more major cities, states, regions or countries in a time zone.

Checking the time in another city or country:

1. From the main menu press 7 PQRS for Calendar.
2. Press 7 PQRS for World Clock.
3. Use the ◀ ✳ # ▶ or ▶II navigation keys to find the current time in one of the following 24 time zones (time zones are identified by one or more cities, states, regions or countries in a time zone):

• San Francisco	• Denver, Arizona
• Chicago, Mexico	• New York, D.C.
• Caracas	• Buenos Aires
• Mid Atlantic	• Cape Verde
• London, Madrid	• Paris, Berlin
• Athens, Helsinki	• Moscow
• Abu Dabi	• Tashkent
• Alma-ata	• Bangkok, Jakarta
• Hong Kong, Beijing	• Seoul, Tokyo
• Guam, Sydney	• Okhotsk
• Wellington	• Samoa, Midway
• Honolulu, Hawaii	• Alaska

4. Press CLR to return to the Calendar or press END ⏻ to return to Standby mode.

Set Time

Your phone will acquire the current time and date from the Sprint PCS system while inside the Sprint PCS Service Area. If you roam outside of the Sprint PCS Service area, or turn on your phone in an analog roaming area you will need to set the time. You may also want to set the current time to properly reflect Daylight Saving Time.

When you turn on your phone in Analog Mode you will be prompted to enter the current date and time. Press the appropriate keys to enter the correct numeric date and time. Time is represented as hh:mm A/P and the date is represented as 00/00./0000.

To Set Time using the menu options:

1. From the main menu press 7 PQRS for Calendar.
2. Press 8 TUV for Set Time.
3. Use the numeric keys to enter the current time and date.

Calculator

You can perform calculations including addition, subtraction, multiplication and division on your phone. To perform a calculation:

1. From the main menu, press 9 WXYZ for Setup / Tool.
2. Press 9 WXYZ for Calculator.
3. Press digit keys to enter the first number in your calculation. Numbers can be up to 9 digits long.

- Press * to enter a decimal point.
- Press # to change the sign of a number to a negative (-).

4. Press OK to set the operator for your calculation. Your choices are:

- [+] addition
- [-] subtraction
- [x] multiplication
- [/] division

5. Press digit keys to enter the second number of your calculation.
6. Press OK to perform the calculation and see the Result, or:

- You can continue to perform calculations with the same operator or change the operator and continue your calculations. Every time that you change the operator, the previous calculation is performed and the result is displayed as the top number in the display.

7. Press OK to perform the calculation and see the Result.

Using your Calendar while your phone is In-Use

Your phones Calendar functions are available while you are on a call, and your phone is In-Use. To access your Calendar while your phone is In-Use:

1. Press the MENU key for In Use menu options.
2. Press 4 GHI for Calendar. Select from the following functions:

- 1: Today
- 2: Month View
- 3: Jump To Date
- 4: To Do List
- 5: Countdown
- 6: Alarm Clock
- 7: World Clock

Whether you are on a call or not, the Calendar features work exactly as described previously in this section.

14

Using the Voice Services of your Sprint PCS Phone

In this Section

- Using Voice Dialing
- Recording Memos

This section explains the features associated with your phone's Voice Services. The easy-to-follow instructions explain how to make calls by simply speaking into the phone. You'll also learn how to record voice memos.

Note:

Train Voice Dial tags in a quiet environment and without the aid of an accessory (for example, a headset or hands-free car kit). For voice-activated dialing in hands-free mode, refer to the optional HFC 600 hands-free car kit manual.

Voice-activated dialing

Your Sprint PCS Phone features voice-activated dialing. When on the Sprint PCS Nationwide Network, you can call up to 20 stored entries by speaking the name into the microphone. Using the voice-activated dialing option requires that you first program the phone to recognize the name of the person you are calling.

Tips on recording names

- Avoid recording similar names phonetically. If you record a similar name to one that is already stored in a voice-dial memory, the phone requests another name.
- Avoid recording in a noisy place.
- Speak clearly and naturally.
- Avoid very long or very short names. Names with two to five syllables are recommended.
- If a voice dial entry does not properly connect, you may need to record the name and number again.

Programming the Phone For Voice-activated Dialing

Programming your Sprint PCS Phone for voice-activated dialing is easy. The phone provides voice prompts and screen displays to guide you through the recording process. To program the phone for voice-activated dialing:

1. From the main menu press 8 TUV for Voice Dial.
2. Press 1 for Record. The phone will prompt you to say the name you want to program.
3. Wait for the beep and then say the name. For best results, use names with at least two syllables, or use both a first and last name. The phone stores the name as a "first" sample, and then prompts you to say the name again.

4. Respond to the prompt by repeating the name after the beep exactly as you did the first time. The phone stores the name as a second sample and then requests the phone number.
5. Enter the phone number on the key pad.
6. To store the phone number, press OK. The number you entered displays, along with the notification "Recorded". If the number you entered matches a name/number already stored in your Internal Phone Book, then the name also displays.
7. The screen then returns to the Voice Dial menu.

For voice-activated dialing in hands-free mode, refer to the optional HFC600 hands-free car kit manual.

Setting-up voice-activated dialing

Voice-activated dialing is always on once you have programmed the phone to accept voice dialing entries. To place voice-activated dialing calls, press and hold TALK. Then say the name into the phone after you hear the voice prompt and the beep.

You can also initiate a voice dialing call by simply opening the flip, when this option is selected.

To change voice dialing setup options:

1. From the main menu press 8 TUV for Voice Dial.
2. Press 4 GHI for Set Active.
3. Press the scroll keys to toggle between options:

- Talk Only: Enables voice dialing by pressing and holding TALK.
- Talk / Flip: Enables voice dialing by pressing and holding TALK (when the phone is open), or by simply opening the flip.

4. When the desired option displays, press OK to Save the setting.

Placing a call using voice dialing

To place a call using voice dialing:

1. Press and hold TALK or open the phone (if set in the main menu).
2. At the voice prompt, say the name into the phone.

- The phone places the call if it recognizes the name.
- If the phone does not recognize the name, it prompts for the name again.
- If the phone is unable to recognize the name after two attempts, it says "The name cannot be recognized." and the following message displays: "Cannot recognize name. Please check name.". The phone returns to Standby mode automatically, and you can try the call again later.

Reviewing voice dialing entries

To review voice dialing entries:

1. From the main menu press 8 TUV for Voice Dial.
2. Press 2 ABC for Review. A list of your stored voice dial numbers display (the names also display if stored in the Internal Phone Book).
3. Press the digit key to select the desired entry or scroll to the desired entry and press OK. The recorded name plays audibly. You can quickly scroll entries without having to listen to each one, or you can listen to them all as they play in order.
4. Press CLR to return to the previous screen.

Erasing voice dialing entries

To erase an individual voice dialing entry:

1. From the main menu press 8 TUV for Voice Dial.
2. Press 2 ABC for Review. A list of entries displays.
3. Press the digit key to select the desired entry, or highlight the desired entry and press OK. The recorded name plays audibly and you are prompted with "OK: Erase".

4. Press OK to Erase that entry. To erase different voice dialing entry scroll to the entry and follow the prompts.

To erase all Voice Dialing entries:

1. From the main menu press 8 TUV for Voice Dial.
2. Press 3 DEF for Erase All. You are given a confirmation screen and a confirmation voice prompt.
3. Press OK to Erase all voice dialing entries or CLR to return to the previous screen.

Voice memo

Your Sprint PCS Phone can record five separate voice memos. Each voice memo can be up to one minute in length. When recording, a 60-second timer displays and an alert sounds to indicate when recording time expires.

The voice memo feature of your phone is intended to let you record information when a pencil and paper may not be available. Before using this feature to record any part of a conversation, you should make sure that the recording will not be made or used for any wrongful or unlawful purpose and that you have the consent of other parties to the call if required by law or under your service agreement. Under the laws of some states, for example, recording any part of a telephone call is illegal unless every person on the call consents to your making the recording. State and federal laws may impose serious criminal penalties, in addition to possible civil liability, for unlawful recording of a telephone call or for disclosure of an illegally recorded conversation. Check to be sure that your intended use of this feature will comply with all applicable laws before recording or playing back a telephone conversation.

Recording a voice memo

To record a voice memo in Standby mode:

1. Press and hold the key on the side of the phone. The message "Recording" displays, along with the timer. You must continue to hold down the key to record (recording is stopped when the key is released).
2. Record the voice memo by speaking into the microphone.
3. To stop recording, release the key. A menu for the current voice memo becomes available.
4. To save the voice memo with the default date / time stamp, press END or do nothing. Your phone will automatically save the voice memo stamped with the date and time after about one minute. Other options on the current voice memo include:

- 1 to Add Label. The default label for a voice memo is the date / time stamp. You can create your own label using the alphanumeric keys. Just start entering your label and press OK when you are ready to save it.
- 2 ABC to Continue. Press and hold to continue recording. You can add to the voice memo, but you must do it before you save the voice memo.
- After a voice memo is stored, the memo cannot be appended or added to.
- 3 DEF to Erase the voice memo.

Reviewing a voice memo

To review a voice memo:

1. From the main menu press 8 TUV for Voice Dial.
2. Press for Review. The phone displays the label for voice memo 1, begins to play voice memo 1 and displays a list of four reviewing options. All voice memos will play in order until you press END , CLR , or select one of the following options:

- Press 1 to Replay the voice memo.
- Press 2 ABC to immediately Erase the voice memo.

- Press 3 DEF to listen to the Next Memo.
- Press 4 GHI to listen to the previous memo (Prev Memo).

3. After reviewing the voice memos, press CLR to return to Standby mode.

15

Experiencing Sprint PCS Wireless Web℠

In this Section

- The Sprint PCS Wireless Web
- Launching and Using the Sprint PCS Wireless Web Browser
- Creating and Finding Bookmarks
- Setting up a Sprint PCS Wireless Web Connection
- Accessing Sprint PCS Wireless Web Updates

By now you've discovered the great features that come with your Sprint PCS Phone™. Now it's time to experience the Sprint PCS Wireless Web. Let the adventure begin.

Note:

Sprint PCS Wireless Web service will not work when roaming off the Sprint PCS Nationwide Network and may not be available in select Affiliate areas.

The Sprint PCS Wireless Web

With the Sprint PCS Wireless Web and your wireless Internet-ready phone, you have access to the wireless Internet in three ways:

- The Sprint PCS Wireless Web Browser allows you to view specially-designed text versions of popular web sites.
- Sprint PCS Wireless Web Connection allows you to connect to the Internet or your company's network with a laptop PC or hand-held computing device and a Sprint PCS Wireless Web Connection™ Kit.
- Sprint PCS Wireless Web Updates allows you to automatically receive the information that's important to you – emails, news, weather and more – directly on your Sprint PCS Phone.

The Sprint PCS Wireless Web Browser

Your phone comes equipped with a MiniBrowser, which allows you to access up-to-the minute information through the Sprint PCS Wireless Web.

You can view specially-designed text versions of popular Internet sites, including Yahoo!®, Amazon.com®, The Weather Channel®, and more. Browsing the Sprint PCS Wireless Web using your phone is different than using a home computer because sites display specialized text and reduce their graphics.

The MiniBrowser connects to the Internet by placing a call. Note that appears on the display whenever a call is in progress, just as with a regular voice call. Service charges vary depending on your service option.

Launching a Sprint PCS Wireless Web Browser Session

To launch the Sprint PCS Wireless Web Browser:

- From the main menu, highlight Wireless Web and press OK. You'll see a few introductory messages as the browser launches.

The first time you use the MiniBrowser, you'll be prompted to enable the security feature. This automatic process will take 3–6 minutes to complete and it occurs just once. When the process is complete, you're ready to start using the Sprint PCS Wireless Web.

Following the security setup, you'll see the Sprint PCS Wireless Web home page. This is the main page for the MiniBrowser and it gives you access to all the sites in the Sprint PCS Wireless Web. The next time you use the MiniBrowser, you may not see the home page at first because the MiniBrowser will display the page you were viewing when you last exited the MiniBrowser.

Note:

The Sprint PCS Wireless Web Home Page contains dynamic content. As new content and Web sites become available the Sprint PCS WIreless Web home Page will change to allow access to the new content and sites.

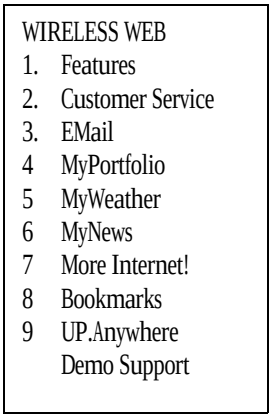

The Sprint PCS Wireless Web Home Page[1] (example)

You may notice that sometimes the MiniBrowser will launch without placing a call. This is because the phone stores recently viewed pages in its memory cache. The MiniBrowser will connect automatically when you access a page that's not stored in the cache.

1. subject to change

If the phone has been inactive for awhile and a new wireless Internet site has not been requested, the MiniBrowser will automatically disconnect. The MiniBrowser will remain active – only the connection will end. The MiniBrowser will automatically reconnect when you go to a wireless Internet site that's not stored in the phone's memory cache. For this reason, you may find that you are billed for several network connections within a single session. This is normal and is designed to minimize airtime charges.

When launching or exiting the MiniBrowser, you may see a prompt. For more information see "Web Guard" on page 119.

Web Guard

Each time you launch the Sprint PCS Wireless Web Browser a reminder displays that you will be charged for the connection time. If you wish to disable this reminder when it appears, follow the steps below:

1. From the main menu press 9WXYZ for Setup/Tool.
2. Press 7PQRS for Web Guard.
3. Use the scroll keys to select one of the four options:

- Prompt To Start (The default setting. You will see the prompt when you enter the browser, but not when you exit it.)
- Prompt Both (You will be prompted when you enter or exit the browser.)
- Prompt To End (You will see the prompt only when you exit the browser.)
- Prompt None (You will never see the prompt.)

4. Press OK to Save your setting or CLR to cancel.

Using the Sprint PCS Wireless Web Browser

Using the MiniBrowser is easy once you've learned a few basics. Here are some tips for navigating the Sprint PCS Wireless Web:

Softkeys

At the bottom of the Browser display is a solid bar which contains browser commands. "Soft" keys (OK and MENU) below the solid bar are used to execute the commands. These two keys are called soft keys because their function changes depending on where you are in the Browser software.

Scrolling

As with other parts of your phone's menu, you'll have to scroll up and down to see everything on some wireless Internet sites. There are two ways to scroll:

- The key scrolls down one line at a time.
- You can use the volume keys on the side of your phone to quickly scroll one page at a time rather than one line at a time.

Selecting

Once you've learned how to activate softkeys, you can start navigating wireless Internet sites.

- Select on-screen items by scrolling, highlighting the desired item, then pressing the correct softkey.

You'll find that the left softkey (OK) is used primarily for selecting items.

- If the items on a page are numbered, you can also use your keypad (number keys) to select an item.

Links, which appear [in brackets], allow you to jump to different wireless Internet pages, select special functions, or even place phone calls.

- Select links by highlighting the link and then activating the appropriate softkey, which is usually (but not always) the left softkey (OK).

Tip:

The tenth item in a numbered list may be selected by pressing the 0 (zero) key on your phone's keypad, even though the number 0 doesn't appear on screen.

Note:

Some links do not display other pages.

Going Home

- To return to the Sprint PCS Wireless Web home page, highlight the Home softkey and press OK, or simply press the CLR key for about one second.

Going to a Wireless Internet Site

From the Sprint PCS Wireless Web home page, you can go to a wireless Internet site simply by highlighting the desired site name and pressing the OK softkey. Note that the list of wireless Internet sites extends beyond one page.

- Select "More Internet!" to see additional site listings.
- To access a site that does not appear on the home page, use the "UP.Anywhere" function. You'll be required to enter the URL (site address) for the site you want to visit. When using "UP.Anywhere", it is not necessary to enter "http://" before the site name. Only HDML and WML sites are accessible.

Note:

Only specially-designed wireless Internet sites are available via the UP.Anywhere function.

Going Back

- To go back one page, press CLR.

Entering Text

Some wireless Internet sites require that you enter text using your phone's keypad. See "T9® Text Entry" on page 46 or "Entering Characters by Tapping the Keypad" on page 45.

Creating a Bookmark

Bookmarks allow you to store the address of favorite wireless Internet pages for easy access at a later time. To create a bookmark:

1. Go to the page that you want to mark.
2. Press and hold MENU. A list of options appears.
3. Select Mark Site.
4. If the page has a title, it will be automatically used for the name of the bookmark. You can also change the bookmark name. Selecting Save will save the name and add the page to your list of bookmarks.

Note:

Bookmarking a page does not store the page contents, just its address.

Note:

Some pages cannot be bookmarked. Bookmark availability is

5. A message will appear confirming that the bookmark was added to the list. Select OK to return to the screen that you marked to resume navigation within the Browser.
6. The new bookmark is added to the bottom of your bookmark list.

Finding a Bookmark

1. From the Home Page, select Bookmarks.
2. Select the bookmark you want and press OK.

Or

1. From the Home Page, press and hold the number associated with the bookmark in the bookmark list.

Deleting a Bookmark

1. From the bookmark list, highlight the bookmark you want to delete.
2. Press MENU.
3. Highlight Erase from the options and press OK. A message displays prompting you to confirm.
4. Press OK to delete the bookmark.

Initiating a phone call while using the Sprint PCS Wireless Web Browser

You may initiate a phone call from the Sprint PCS Wireless Web if the site you are using supports this feature (the phone number may be highlighted and the left soft key will appear as "Call."). In most cases, you can also use the TALK key to call the number. The Browser connection will be terminated when you initiate the call. After you end the call, your phone will return to Standby mode.

Receiving a phone call while using the Sprint PCS Wireless Web Browser

You can receive phone calls while in an idle wireless web session. During a wireless web session, your phone and your service provider pass information back and forth in packets, this is done for efficiency and it reduces your

service access cost. Your phone is connected to the service provider only during the exchange of a packet; the Service Indicator will be present when a packet is being exchanged. Your phone stores this information contained in a packet in memory for you to use. Whenever packets of information are not being exchanged, your phone can receive calls. To answer a call while in the Sprint PCS Wireless Web Browser press TALK. When you complete your call, you are automatically returned to your wireless web session where you were when you answered your call.

Ending a Browser Session

Simply press END to end a browser session and disconnect from the Sprint PCS Wireless Web session. If your Web Guard setting (MENU 9WXYZ 7PQRS) is "Prompt to end" or "Prompt both", you will be prompted whether you want to end the browser session.

Troubleshooting

If you're having trouble using the Sprint PCS Wireless Web Browser, use the following troubleshooting guide:

Problem: You can't escape from a particular site.

Recommendation: Go to the Sprint PCS Wireless Web home page by pressing and holding CLR.

Problem: You continue to receive errors when using a certain site.

Recommendation: Try again later. Sites are sometimes temporarily inaccessible due to high traffic, similar to your home or office internet access. If the problem persists, there may be a problem with the site.

Problem: The MiniBrowser appears to be malfunctioning or stops responding.

Recommendation: Turn your phone off then on again. If that also fails, try removing the battery and then replacing it.

If none of these solutions work, please contact Sprint PCS Customer Care.

Problem: An error message says that my phone is not yet registered for Sprint PCS Wireless Web services.

Recommendation: Sprint PCS Wireless Web services can take longer to activate than voice services. Please try again later. If the problem persists for more than one day, please contact Sprint PCS Customer Care.

Problem: The message "Service Not Available" appears.

Recommendation: Your phone can't acquire a signal or you are in an area that does not yet support Sprint PCS Wireless Web services. If possible, move to an area that supports Sprint PCS Wireless Web services. If you continue to receive this message, please contact Sprint PCS Customer Care.

Problem: The message "Data Server Unavailable" appears.

Recommendation: Sprint PCS Wireless Web services are temporarily unavailable for some reason. Please try again later. If this problem persists, please contact Sprint PCS Customer Care.

Problem: The message "IP Address Missing" appears.

Recommendation: Your phone's factory settings have been altered. Please contact Sprint PCS Customer Care for assistance.

Setting up a Sprint PCS Wireless Web Connection

Getting Started

Your wireless Internet-ready Sprint PCS Phone allows you to connect to a laptop PC, hand-held or palm-sized computing device to send and receive email, access the Internet or your company's network and more, without searching for a wall-mounted telephone jack. In just three steps, you can use your connectivity:

1. First, you'll need a Sprint PCS Wireless Web™ Connection Kit (sold separately). For purchase information, see page xx in the Accessories section.
2. Connect your laptop PC to your Sprint PCS Phone by using the serial data cable. The cable adapter will connect to a hand-held or palm-sized computing device.
3. Finally, take a few minutes to install the Sprint PCS Dialer℠ software onto your computer using your CD.

- For complete details on how to install and use this software, refer to the user guide in the Sprint PCS Wireless Web Connection Kit you purchased.

Placing a Call

To place a call while you're connected to the Sprint PCS Wireless Web:

1. First, make sure the cable is connected properly.
2. Open the Sprint PCS Dialer software or application on your computer and place the call.

- The phone displays the number your computer is calling and a "connecting" message is displayed.
- Once the call successfully connects, your phone's display shows you information on the status of the data call.

Note:

You will not need to install the Sprint PCS Dialer for Palm or HPC/Windows CE

Receiving Sprint PCS Wireless Data and Fax Calls

Most users use the Sprint PCS Wireless Web Connection to place outgoing data/fax calls. But you can also set up your Sprint PCS Phone to receive (host) data and fax calls. Because each phone model is different, the Sprint PCS Wireless Web Connection Kit doesn't include instructions for how to set up your phone to receive data and fax calls. Here's the procedure to set up your Sprint PCS Phone to receive a (mobile-terminated) data or fax call:

Receiving a Fax or Data Call

1. Ensure that your Sprint PCS Phone is connected to your computing device and is powered on.
2. From the main menu press 9WXYZ for Setup/Tool.
3. Press 3DEF for Data/Fax In.
4. Use the scroll keys to select "Incoming Fax Only" or "Incoming Data Only".
5. Press OK to save the setting. The screen displays "No incoming voice calls can be received". Your phone then returns to Standby mode and displays "* Fax Only *" or "* Data Only *" above the greeting.

Once you have set your phone's mode to "Incoming Fax Only" or "Incoming Data Only", you cannot receive regular voice calls until you change back to "Voice". See "Changing Your Phone Back to Voice Calling" on page 127.

6. In the Fax program on your PC, setup the Answer mode. Click on "Receive" and select one of the following:

- Automatic Receive (recommended)
- Manual Receive

Your phone is now ready to receive an incoming fax or data call.

Changing Your Phone Back to Voice Calling

1. From the main menu press 9WXYZ for Setup/Tool.
2. Press 3DEF for Data/Fax In.
3. Use the scroll keys to select "Voice Call Only".
4. Press OK to Save the setting. The screen displays "No incoming data/fax calls can be received". Your phone then returns to Standby mode.

Note:

The phone always powers up in Standby mode, even if it was powered down in Data/Fax mode. The phone also returns to Standby mode if the data cable is disconnected.

Using Special Features During a Sprint PCS Wireless Web Call

Your phone gives you the ability to use special features while you're on a Sprint PCS Wireless Web call. They are outlined below:

- Caller ID: Just like your phone stores regular Caller ID numbers, it also stores the numbers of incoming Sprint PCS Wireless Web Connection calls. To distinguish between the two types of calls, "Data" or "Fax" displays along with the number of the caller when you view your Caller ID records.
- Call Waiting: If someone tries to reach you while you're connected to the Sprint PCS Wireless Web, your phone behaves like it is turned OFF. Depending on your service, callers may get your voicemail. Call Waiting is automatically deactivated whenever you place or receive a Sprint PCS Wireless Web Connection call.
- Accessing features: You can still access most of your phone's features while you're connected to a Sprint PCS Wireless Web Connection Call. You can navigate the phone's menu system to change or view your phone's features or phone book entries. You can also read messages or view the Caller ID records that you received before placing the call.

Note:

Caller ID is not available on Sprint PCS Wireless Web Browser calls.

It's important to note that some of the normal ways to end a call won't work with the Sprint PCS Wireless Web Connection calls. You should always close the connection through the application on your computer. Your phone will then return to Standby mode.

Although you can end a Sprint PCS Wireless Web Connection call by disconnecting the data cable or turning off your phone, this may disrupt your computer.

Accessing Sprint PCS Wireless Web Updates

With Sprint PCS Wireless Web Updates, you'll automatically receive the information that's important to you. Internet updates are sent at the times you choose with the Sprint PCS Wireless Web[SM] Messaging capability.

By using personalization options on wireless Internet sites, such as My Yahoo! Page, you can decide which updates you want to receive. In addition to stock quotes and news headlines, you'll also have access to weather reports, Yahoo!, sports scores and more.

Every Sprint PCS Phone is capable of receiving updates or other text messages if you have signed up for the Sprint PCS Wireless Web or the Sprint PCS Wireless Web messaging option.

To enroll in Sprint PCS Wireless Web Updates, you must be able to access the Internet from a computer.

To sign up:

- Visit www.sprintpcs.com to sign up for service.
- Visit www.sprintpcs.my yahoo.com to change selections and times after your initial sign-up for the service.

Navigating the Sprint PCS Wireless Web Browser

When you use the Sprint PCS Wireless Web Browser, some keys on your phone operate differently than during a normal phone call. These keys are explained below. The Browser presents on-screen items in one of the following ways:

- text or numeric input
- links (embedded in content)
- numbered options (some options may not be numbered)
- simple text

You can act on the options or links by making use of the soft keys. The soft keys (OK and MENU) are located below the bottom line of the display.

The Sprint PCS Wireless Web Browser soft keys

At the bottom of the Browser display is a solid bar which contains browser commands. "Soft" keys (OK and MENU) below the solid bar are used to execute the commands. These two keys are called soft keys because their function changes depending on where you are in the Browser software.

Here's how the keys work in the Browser:

Volume Keys: These keys perform several functions:

- Allow you to scroll up or down by a page.
- Press and hold the up key for one second to back up one level in the browser.
- Press and hold the down key for one second to go to your home page.

OK / Messages Key: OK This is the left soft key. The left soft key is used primarily for selecting the highlighted item, but its function may change depending on what you are doing

TALK Key: TALK Press this key to receive a call while in a Browser session. For more information on this feature see "Receiving a phone call while using the Sprint PCS Wireless Web Browser" on page 122.

Numbered Keys 0 - 9: If the items on a page are numbered, you can use these keys to select them.

Asterisk Key: ✱ Press to scroll backward through options and when entering text.

Pound / Space Key: # This is the space key. Press to insert a space when entering text or to scroll forward through menu options.

0 / Next Key: 0 Enters a 0. The Next key moves to the next word in T9 text entry mode.

CLR Key: CLR This key performs two functions:

- Backs you up in the Browser. Pressing it once backs you up one page. Pressing and holding it backs you up to the Home page.
- Clears out entered text or numbers. When entering numbers or text, press CLR to clear the last number, letter, or symbol. Press and hold CLR to completely clear the input field.

END Key: END Exits the Browser session and returns the phone to Standby mode.

MENU Key: MENU This is the right soft key. The right soft key is used to access secondary options, or a menu of secondary options. This key is also used to change text entry modes when entering text.

Navigation Keys: , , and Use the navigation keys to scroll to and select Browser options. The currently selected option is indicated by " ▶ ". You can also use the navigation keys to move the cursor when editing text. When entering text press to change text entry options for the indicated text entry mode.

16

Selecting your Accessories

In this Section

- Overview of Available Accessories for this Phone
- How to Order

We offer a variety of accessories for your new Sprint PCS Phone™. Choose from chargers, batteries and hands-free devices – all designed to give you more flexibility and convenience.

Accessory Options

Standard Battery

The standard battery provides approximately xx hours of continuous talk time in digital mode and xx hours of continuous talk time in analog mode or approximately xx hours of continuous standby time in digital mode and xx hours continuous standby time in analog mode. The battery charges in about xx hours using any of the charging accessories available with this phone.

Extended Battery

The extended battery provides approximately xx hours of continuous talk time in digital mode and xx hours of continuous talk time in analog mode or xx hours continuous standby time in digital mode and xx hours continuous standby time in analog mode. The battery charges in about xx hours using any of the charging accessories available with this phone.

Cigarette Lighter Adapter

You can charge your phone (even during a call) in your vehicle using the cigarette lighter adapter.

Hands-Free Car Kit

Allows you to operate your phone hands-free so you can drive safely. It also charges the phone's battery.

Desktop Charger

The Desktop Charger is provided with your phone for convenient charging.

Travel Charger

Compact and lightweight, this is a convenient way to charge your phone while on the road.

Sprint PCS Wireless Web™ Connection Kit

This convenient connectivity kit connects to the serial port and contains Sprint PCS Dialer℠ software, a serial data cable and a cable adapter to connect your Sprint PCS Phone to your mobile computing device. Two products – the Sprint PCS Wireless Web Connection Kit and the Sprint PCS Wireless Web Connection Card Kit™ – are designed to let you connect by using your Internet-ready Sprint PCS Phone. Another product-the Sprint PCS Wireless Web Modem – acts as a wireless modem, so you can connect without using a Sprint PCS Phone. Designed for Apple® Macintosh® portables, PC laptops and Windows® CE devices.

Sprint PCS Wireless Web Connection Card Kit

This multi-device kit enables socket and/or PC card slot connection to the PCMCIA slot – simplifying the connection and expanding the number of available peripherals by freeing up the serial port for fax or printer use. This kit contains Sprint PCS Dialer software, a serial data cable and a cable adapter to connect your Sprint PCS Phone to your mobile computing device. The kit contains all the components necessary to connect laptops, Windows CE devices and Macintosh portables.

How to Order

Most Sprint PCS Accessories found at local Sprint PCS Centers can also be purchased through the Sprint PCS Accessory Hotline℠ by calling 1-800-974-ACC1 (2221).

Next day delivery is offered in select areas. You can also visit our web site at www.sprintpcs.com.

17

Knowing Performance and Safety Guidelines

In this Section

- Getting the Most Out of your Reception
- Maintaining Safe Use and Access to your Phone
- Caring for the Battery
- Acknowledging Special Precautions and the FCC Notice
- Sprint PCS Phone and Battery Specificatons

Part of getting the most out of your Sprint PCS Phone™ is knowing where and how it works at optimum efficiency. This section outlines performance and safety guidelines that ensure you experience the full quality your Sprint PCS Phone was designed to give you.

Getting the Most Out of your Reception

Keeping Tabs on Signal Strength

The quality of each call you make or receive depends on the signal strength in your area. Your phone informs you of the current strength by displaying a number of bars next to the signal strength icon. The more bars displayed, the stronger the signal.

If you're inside a building, being near a window may give you better reception.

Understanding Power Save Feature

If your phone is unable to find a signal after 15 minutes of searching, a Power Save feature is automatically activated. If your phone is on, it periodically rechecks service availability or you can check yourself by pressing any key. Anytime the Power Save feature is activated, a message displays on the screen. When a signal is found, your phone returns to Standby mode.

Understanding How your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watts to 0.2 watts in digital mode.

Knowing Radio Frequency Safety

The design of your Sprint PCS Phone complies with updated NCRP standards described below.

In 1991-92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

Maintaining your Phone's Peak Performance

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- Hold the phone with the antenna up, fully-extended and over your shoulder.
- Try not to ever hold, bend or twist the phone antenna.
- Don't use the phone if the antenna is damaged.
- Speak directly into the mouthpiece.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery. If it's inoperable, return it to a Sprint PCS Center or call Sprint PCS Customer Care for service.

Tip:

For the best care of your phone, only Sprint PCS authorized personnel should service your phone and its accessories. Faulty service may void the warranty.

Maintaining Safe Use of and Access to your Phone

FAILURE TO FOLLOW THE INSTRUCTIONS OUTLINED MAY LEAD TO SERIOUS PERSONAL INJURY AND POSSIBLE PROPERTY DAMAGE

Using your Phone While Driving

Talking on your phone while driving is illegal in some states. Even where it's not, it can divert your attention from driving. Remember that safety always comes first.

When using your phone in the car:

- Get to know your phone and its features, such as speed dial and redial.
- When available, use a hands-free device.
- Position your phone within easy reach.
- Let the person you are speaking to know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.
- Do not take notes or look up phone numbers while driving.
- Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic.
- Do not engage in stressful or emotional conversations that may divert your attention from the road.
- Dial 9wxyz 1 1 to report serious emergencies. It's free from your wireless phone.
- Use your phone to help others in emergencies.
- Call roadside assistance or a special non-emergency wireless number when necessary.

Tip:

Purchase an optional Hands-Free Car Kit.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Using your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating and entertainment systems in motor vehicles. Check with the manufacturer or its representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

Tip:

Always turn off the phone in health care facilities and request permission before using the phone near medical equipment.

Turning Off your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Turning Off your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn off your phone when in a blasting area or in other areas with signs indicating that two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn off your phone when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone or its accessories could generate sparks. Sparks could cause an explosion or a fire resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- Fueling areas such as gas stations
- Below deck on boats
- Fuel or chemical transfer or storage facilities
- Areas where the air contains chemicals or particles such as grain, dust or metal powders
- Any other area where you would normally be advised to turn off your vehicle engine

Tip:

Never transport or store flammable gas, liquid or explosives in the compartment of your vehicle that contains your phone or accessories.

Restricting Children's Access to your Phone

Your Sprint PCS Phone is not a toy. Children should not be allowed to play with it because they could hurt themselves and others, damage the phone or make calls that increase your phone bill.

Caring for the Battery

Protecting your Battery

The guidelines listed below help you get the most out of your battery's performance.

- Use only Sprint PCS-approved batteries and desktop chargers. These chargers are designed to maximize battery life. Using other batteries or chargers voids your warranty and may cause damage.
- In order to avoid damage, charge the battery only in temperatures that range from 32º F to 113º F (0º C to 45º C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.
- It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:

  Less than one month:
  4º F to 140º F (-20º C to 60º C)

  More than one month:
  4º F to 113º F (-20º C to 45º C)

Tip:

For safety, do not handle a damaged or leaking Lilon battery.

Disposal of Lithium Ion (LiIon) Batteries

For safe disposal options of your Lilon batteries, contact your nearest Sprint PCS-authorized service center.

Special note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Acknowledging Special Precautions and the FCC Notice

FCC Notice

The phone may cause TV or radio interference if used in close proximity to receiving equipment. The FCC can require you to stop using the phone if such interference cannot be eliminated.

Vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn: Publication Sales Division.

Cautions

Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment. Only use approved batteries, antennas and chargers. The use of any unauthorized accessories may be dangerous and voids the phone warranty if said accessories cause damage or a defect to the phone.

Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending or sitting on it.

Sprint PCS Phone and Battery Specificatons

Dual Band:	CDMA 1.9GHz / AMPS 800 MHz
Display Screen:	Graphical LCD (with 1 dedicated Icon Line)
Battery Type:	Standard: xxx mAh Lithium-Ion
	Extended: xxx mAh Lithium-Ion
PCS Antenna:	Retracable, user-replaceable

Sprint PCS Phone with:	Slim Battery	Standard Battery
Dimensions (H x W x D):	x 1.8 x 0.7 inches	4.1 x 1.8 x 0.8 inches
	105 x 45 x xx.xmm	105 x 45 x 21.5 mm
Weight:	x.x oz. (xx g)	x.x oz. (xx g)
Volume:	87 cc	xx cc
Talk Time Digital:	up to tbd hours	up to tbd hours
	or	or
Standby Time Digital:	up to tbd hours	up to tbd hours

Sprint PCS Phone with:Extended Battery	
Dimensions (H x W x D):	x 1.8 x 0.7 inches
	105 x 45 x xx.x mm
Weight:	x.x oz. (xx g)
Volume:	xx cc
Talk Time Digital:	up to tbd hours
	or
Standby Time Digital:	up to tbd hours

Body-Worn Operation

To maintain compliance with FCC RF exposure guidelines, if you wear a handset on your body, use the Sprint PCS supplied or approved carrying case, holster or other body-worn accessory. If you do not use a body-worn accessory, ensure the antenna is at least one inch (2.5 centimeters) from your body when transmitting. Use of non-Sprint PCS approved accessories may violate FCC RF exposure guidelines.

For more information about RF exposure, please visit the FCC website at www.fcc.gov.

Owner's Record

The model number, regulatory number and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This will be helpful if you need to contact us about your phone in the future.

Model:

Serial No.:

User Guide Proprietary Notice

CDMA Technology is licensed by QUALCOMM Incorporated under one or more of the following Patents:

4,901,307 5,109,390 5,267,262 5,416,797

5,506,865 5,544,196 5,657,420 5,101,501

5,267,261 5,414,796 5,504,773 5,535,239

5,600,754 5,778,338 5,228,054 5,337,338

5,710,784 5,056,109 5,568,483 5,659,569

5,490,165 5,511,073

T9 Text Input is licensed by Tegic Communications and is covered by U.S. Pat. 5,818,437, U.S. Pat. 5,953,541, U.S. Pat. 6,011,554 and other patents pending.

18

MP3 Player

In this Section

- Getting Started
- Installing Music Match Jukebox
- Downloading MP3 Music Files
- Playing MP3 Music
- Using the Phone Keys
- Answering or Making a Call with the Remote Control
- MP3 Player Menus
- Solving Problems
- More Information on MP3
- Remarks on Copyrights
- Safety

Your Sprint PCS Phone™ is also an MP3 Player complete with stereo headset. It makes it easy to take your favorite music wherever you go.

Installation Recommendations

MusicMatch Jukebox can be installed on Windows 98®, Windows ME® and Windows 2000® Professional operating systems. The ,inimum recommended system configuration is:

- 166 MHz processor or better
- 16 MB RAM
- 30 MB hard drive space
- SVGA or higher resolution monitor
- 4x CD-ROM drive, mouse, keyboard
- SoundBlaster compatible card, speakers
- Video card and installation of Microsoft's Media Player 6.4, for video

Avoid simultaneously running other applications that are writing to the hard drive. Certain configurations, which cause the operating system to crash, such as low memory or many open windows, will also affect recording quality. For more information please refer to the MusicMatch Jukebox Getting Started Guide.

Tip:

Take a few moments to get familiar with all of the functions of the Remote Control.

About the Remote Control

With the remote control supplied with your phone, you can listen to MP3 music downloaded to your phone (see downloading MP3 music). In addition to the stereo headset through which you will listen to MP3 music, the remote control makes it easy to Play, Pause, Fast Forward or Rewind in a song or to move to the next or previous song. The remote also contains a Volume control to adjust the volume level in the stereo headset, a Hold switch to prevent accidental button presses, Voice Memo record button and a button to accept incoming phone calls.

Using the clip

Squeeze the clip on the back of the remote control to attach "Clip" the remote control to your shirt pocket or clothing where it will be convenient to reach and use.

Remote control keys

Here are brief descriptions about the remote control keys. For further details, see page 10.

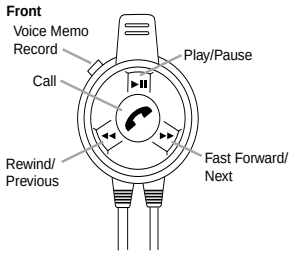

- **Voice Memo Record**

  Equivalent with the Record button on the left side of the phone. During MP3 music playback, this button repeats playing the selected section. For details, see page 11.

- **Play/Pause**

  Plays the MP3 music or pauses playing.

- **Call**

  Press to answer an incoming call or press and hold to initiate Voice Dialing. For details, see page 14.

- **Rewind/ Previous**

  Press within the first 2 seconds of a song to go to the beginning of the previous song. After 2 seconds of play, press to go to the beginning of the current song. Press and hold to rewind within the current song.

- **Fast Forward/Next**

  Press to skip to the next song. Press and hold to Fast Forward in the current song.

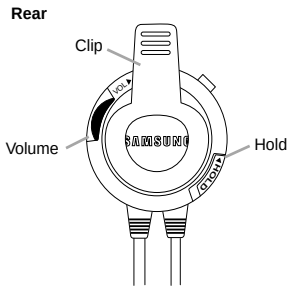

- **Hold**

  Slide it to HOLD position to hold the keys to prevent them from being pressed unintentionally.

- **Volume**

  Adjusts the stereo headset volume. Turn the volume control in the direction of the arrow to increase volume. This control work in conjunction with the volume control on the side of your phone. For maximum volume, adjust the volume control on the phone and on the Remote Control to High.

Installing MusicMatch Jukebox

To download the MP3 files from your PC to your phone, you must install the supplied MusicMatch Jukebox software in your PC.

1. Insert the software CD-ROM supplied with your phone into the CD-ROM drive.
2. If Windows automatically runs the CD-ROM, go to step 5.
3. If not, select Run from the Start menu.
4. At the Run prompt, type d:AUTORUN (where d: is your CD-ROM drive-most CD-ROM drives are either d: or e:) in the input field and click OK.
5. Click Install and follow the screen prompts to install MusicMatch Jukebox.

6. When the software is correctly installed, the Music Match Jukebox folder is created in the Programs folder of on your PC and the Music Match Jukebox icon appears on the desktop of your PC.

Note:

Install Music Match Jukebox on your PC before connecting your phone the PC.

Tip:

Read the MusicMatch. Getting Started Guide by clicking on either the PDF icon or the HTML icon. (You will need Adobe Acrobat Reader installed on your computer.)

Tip:

Click on Music to go to the Sprint PCS Music Web Site.

Downloading MP3 Music Files

Before downloading to your phone

To download the MP3 music files into your phone, you must download them from the appropriate Internet site to your PC or record them yourself. You may also conveniently manage and retrieve your MP3 music files at sprintpcs.com\mymusic.

Tip:

Connect your phone to the PC before launching MusicMatch Jukebox Plus.

Note:

It may take a couple of seconds for your phone to connect with the PC.

Downloading MP3 files on your PC to your phone:

1. Insert one end of the download cable supplied with the phone to the connector on the bottom of your phone.

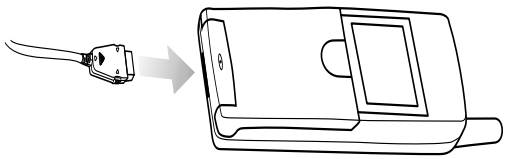

2. Insert the other end of the cable into the USB port on the PC.

Note: If the USB port is already occupied by a another USB device cable, remove it from the port and connect the download cable.

3. When the phone is properly connected, you can see the display on your phone as shown below.

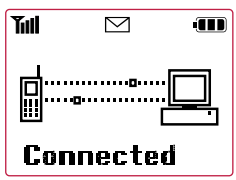

4. Double-click the MusicMatch Jukebox icon on the Desktop.
5. You can also open the MusicMatch Jukebox by selecting programs from the Start menu, then selecting MusicMatch Jukebox.
6. The MusicMatch Jukebox window opens.

7. Create a Play List to download to your Uproar phone. To add a song to a Play List, double click on the song title in your Music Library. (For more information on creating a Playlist refer to Help in MusicMatch Jukebox.)
8. Download MP3 files to you phone by clicking on the Options menu and selecting Send to Device, Download Playlist to SAMSUNG Uproar.
9. The music tracks in the Playlist you created are listed in the Files to Download window. With the Uproar phone connected to the PC, music tracks already on the phone display in the Portable Device Memory window.

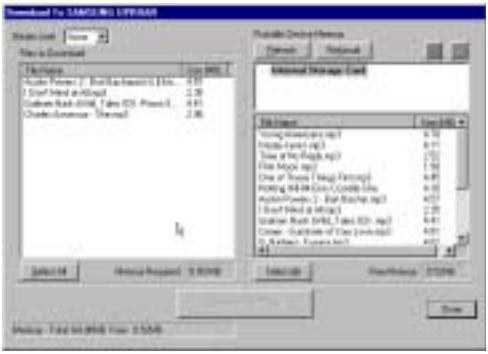

10. Press Select All to download your entire playlist to your Uproar phone. The downloaded MP3 files are transferred to your phone in the same order as they appear in the Files to Download window.
11. When the transfer is completed, you see the files in the Portable Device Memory window.
12. Disconnect the data cable from your phone and PC.

To erase all MP3 files stored on your phone click "Reformat".

Now, you can enjoy listening to the MP3 music on your phone. See page 10.

Tip:

Click Refresh to update the list of MP3 tracks stored on your phone.

Tip:

It's faster to delete all of the songs stored on your Uproar phone using the Delete All phone menu option from the Music Mode

Note:

Your Uproar phone has 64 MB of memory. If your Playlist is larger than 64MB you need to make it shorter. Refer to the Memory Required window to see how many MB's your Playlist is.

Note:

You cannot download and play songs at the same time.

Notes:

- You can download as many MP3 files as the amount of the memory installed in your phone. Your phone comes with 64 MB of memory.
- If you have removed a printer cable to connect the download cable to the USB port, do not forget to reconnect the printer cable to the port when you finish downloading.
- For more information on using Music Match Jukebox, refer to the on-line Help in the program.

Playing MP3 Music

After you downloaded the MP3 files to your phone, you can play the files to enjoy the music. To play the MP3 file, you can use the keys on the remote control or use the menu functions on your phone.

Connecting the Remote Control

Connect the remote control to your phone by inserting the connector end of the remote control into the earphone/ remote jack on your phone.

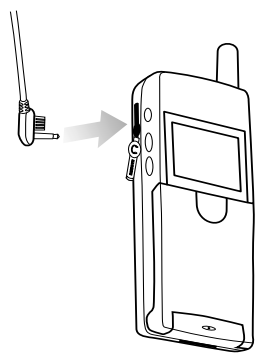

Using the Remote Control Keys

- **To start playing the music press ▶❚❚.**

During a playback, pressing ▶❚❚ pauses playing. If you want to resume playing, press ▶❚❚ once again.

- **To skip the previous song press ◀◀.**
  - If you press the key during a playback, the phone will replay the current song from the beginning.
  - If you press this key during the first 2 seconds of a song, the phone skips back to the beginning of the previous song.
  - If you press and hold down the key while playing the music, your phone searches backward until you release the key. You will not hear music during the search.
- **To skip to the next song press ▶▶.**
  - If you press the key during playback, the phone skips to the next song.
  - If you press and hold down the key while listening to the music, your phone searches forward until you release the key. You will not hear music during the search.
- **To repeat playing a selected section**

  Define the starting point and ending point during a playback by pressing and holding the button on the left-top of the remote control. Press and hold to mark the beginning of the selection that you want to hear repeated, and release the button to mark the end of the selection.

  Your phone will play the recorded selection two times.

  To cancel playing the recorded selection, press ▶❚❚ and the music is played normally.
- **Adjusting the Stereo Headset Volume**

  Adjust the volume switch on the right side of the remote control in appropriate direction. Turn the Volume control in the direction of the arrow to decrease volume. This control works in conjunction with the Volume control on the side of the phone. For maximum volume, set volume control on the phone and on the remote to High.

Using the Phone Keys

Press the corresponding number keys to perform the following functions:

- **Rewind/Previous** 1

Press 1 during the first 2 seconds of a song to skip to the previous song. After 2 seconds, pressing 1 will restart playing the current song from the beginning. Press and hold 1 while playing to search backward in the current song until you release the key.

- **Play/Pause** 2 ABC

Press 2 ABC to begin playing music. Pressing 2 ABC key once again Pauses playing. To resume music playing, press the 2 ABC key one more time.

- **Fast Forward/Next** 3 DEF

Press 3 DEF to skip to the next song. Pressing and holding 3 DEF key during playback fast forwards through the current song until you release the key.

- **Time Display** 4 GHI

Displays the Total track time and the Elapsed track time along with the track number and name.

- **Repeat Mode** 5 JKL

Allows you to select the Repeat mode. Press 5 JKL to display the current Repeat Mode option. To change the Repeat Mode scroll to the desired option and press OK. Repeat Mode options are:

NORMAL: Plays the songs normally in playlist order.

SHUFFLE: Plays back all the songs in random, not in order.

REPEAT ALL: Repeats playing all the songs in the phone in order of the number.

REPEAT: Repeats playing the selected song

- **Equalizer** 6 MNO

Allows you to select the equalizer mode. The available choices are CLASSIC, JAZZ, ROCK, NORMAL and DANCE. Set the equalizer mode to the genre of the music you are listening to. Press OK when the desired mode displays.

Answering or Making a Call with the Remote Control

You can answer a call in the MP3 mode at any time using the remote control. You can also redial the last number called using the remote control.

- When a call comes in, press the key on the remote control to answer the call.
- To mute an incoming call press any other key.
- When you want to redial the last number called, press the key on the remote control twice. Your phone dials the last number called.
- If voice dialing is activated on your phone, press and hold the key on the remote control until the prompt begins to play, after the prompt speak the name of the person you want to call.
- To finish your call, press on the remote control.
- To record a phone conversation or record voice memo in Standby mode press , which is equivalent to the Record button on the left side of the phone, see "Recording a voice memo" on page 112.

MP3 Player Menus

Your Uproar phone's MP3 Player Menus allow you to set features related the MP3 Player operation, receiving calls and alerts during MP3 Player operation.

After a few moments of inactivity your Uproar displays the Standby Mode screen, but will continue to play music. To access these commands it is necessary to return to active MP3 Mode by pressing and holding the key for 2 seconds.

Note:

If Call Alert is On your phone will alert you of incoming calls through the Stereo Headset. For details, see page 14.

When listening to music all audible alerts are heard through the ear speakers unless Call Alert has been turned off.

Standby Mode

Access the MP3 Player menu by pressing MENU on your phone.

1. Press 1.
2. Scroll to the desired menu option and press OK.
3. The menu options and their functions are:

Play List: Displays the list of songs stored on your Uproar phone in Play List order.

Play Mode: MP3 Player functions like Rewind, Play/Pause.

Call Alert: Select On or Off to have Incoming Call Alerts played in the Stereo Headset.

Memory: Displays the Total and Free memory available for MP3 songs on your Uproar phone.

Erase All: Erases all MP3 songs stored in memory on your Uproar phone.

Solving Problems

If you experience problems in using the MP3 functions, perform the following simple checks.

There is no sound from the stereo earphones

- Is the remote control/earphone correctly connected to your phone?
- Have you removed the download cable from the phone? You must disconnect the downloading cable from the phone before playing a music file.
- Are the volume controls on both the phone and Remote set to an audible level?

The file name does not display correctly

- The displays the file number, file name, file size and playing time. The phone display up to 29 letters of the file name in two lines. If the file name has more than 29 characters, the additional characters do not display.
- The file name is automatically saved when you download the file to the phone. To ensure that you can

read the song name on the phone you may need to change the name on the PC.

The remote control keys do not operate

- Have you set the Hold key on the left side of the remote control to Hold position? If so, release Hold.

Remarks on Copyrights

Intellectual property including music is protected by worldwide copyright. It is permitted to make a copy of legally acquired sound carriers (e.g. CDs, prerecorded MCs) of music files (e.g. from the Internet) for personal use. It is not permitted to offer these copies for sale or to pass them on to third parties.

When downloading MP3 files from the Internet make sure that the files are properly licensed, the seller must be in possession of the rights to the songs being offered.

Safety

Operating Motor Vehicles

Do not operate motor vehicles while listening to music using the Uproar Stereo Headset. Safely store your Uproar phone and accessories so they do not become projectiles in the event of an accident.

Some States and Local Governments may have Laws regarding the use of Mobile Phones and wearing earphones. Consult the Laws in your area for more information.

Loud Music

Prolonged exposure to loud sounds can damage your hearing. Use caution to avoid playing music to load and for prolonged periods of time.